


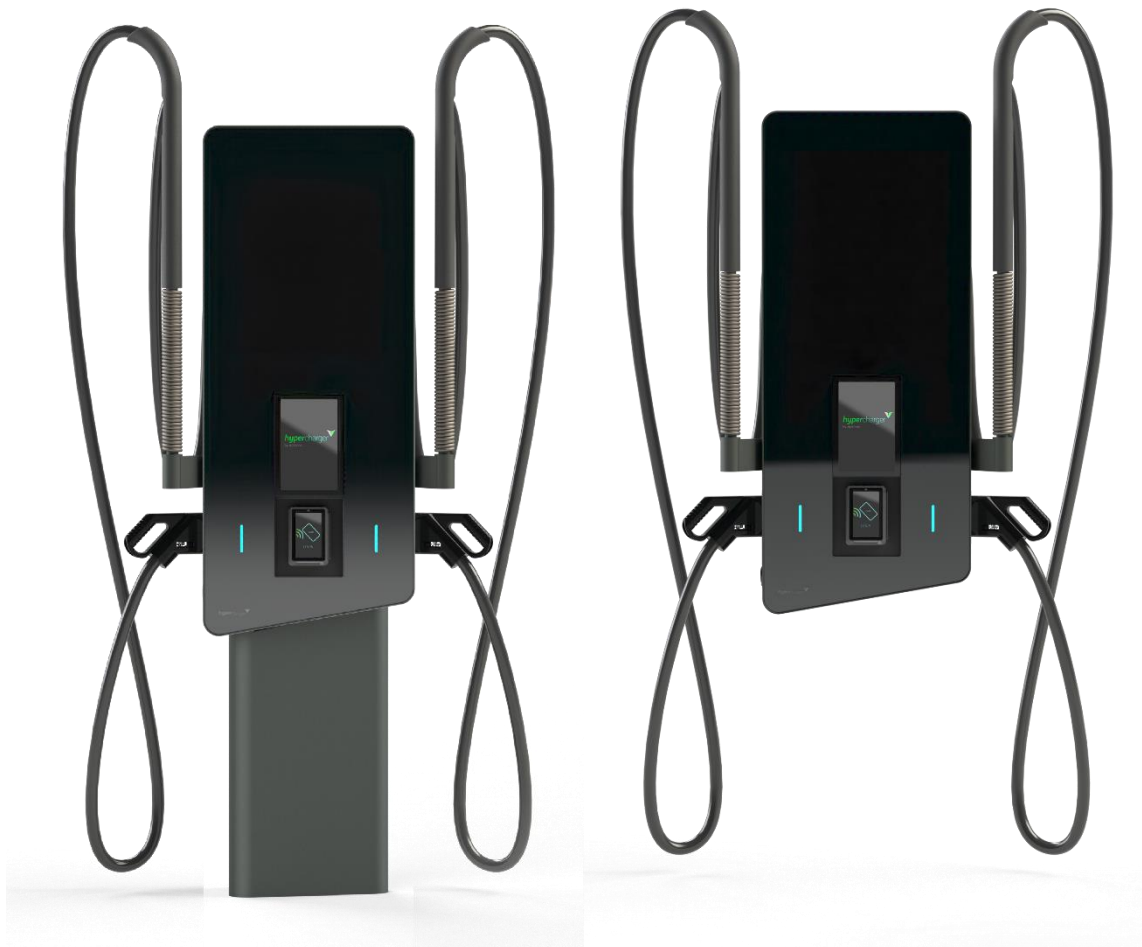

Operating and Installation Guide Hardware hypercharger HYC50 (50 kW) Fast charging system for electric vehicles

for HW-Version 6.1



tomas.daukas@elintacharge.com
22.08.2023 06:06:06

This page was intentionally left blank.

Operating and installation instructions

Version

Version 1-10 of operating and installation instructions, June 2023

English translation of original German version

© 2023 alpitronic Srl

All rights reserved. Reproduction of this document, in whole or in part, is only permitted with the permission of alpitronic Srl. The information in this document is subject to change without notice. Although the content of this document has been carefully checked for accuracy, errors cannot be completely ruled out. If you discover an error, please inform us at support@hypercharger.it. alpitronic Srl accepts no responsibility for errors that may occur in this document. This document was originally written in German. Versions in other languages are translations of the original document and alpitronic Srl accepts no liability for errors in translation. In case of doubt, the original German version constitutes the reference document, the text of which is legally binding.

In no event shall alpitronic Srl be liable for any direct, indirect, special, incidental, consequential or other damages of any kind (including, without limitation, damages for loss of profits or loss of data) arising out of the use of this document.

Attention



Please note that all warranty claims become void if these operating and installation instructions are not observed.

If changes are made to the device that are not included in the evidence of the original manufacturer alpitronic Srl or have not been authorized and released by alpitronic Srl, the person concerned is considered the manufacturer of the switchgear combination and not alpitronic Srl.



Please note that for chargers, which were optionally and on customer request built in conformity with the MessEG/EV, the appendix A1 ("Technical documentation for the MessEG/EV") must be observed as further documentation.

Manufacturer

alpitronic Srl
Via di Mezzo ai Piani, 33
39100 Bolzano (BZ)
ITALY
Tel.: +39 0471 1961 000
Fax: +39 0471 1961 451
Homepage: <http://www.hypercharger.it>
E-Mail: info@hypercharger.it

Service

alpitronic Srl
Via di Mezzo ai Piani, 33
39100 Bolzano (BZ)
ITALY
Tel.: +39 0471 1961 333
Fax: +39 0471 1961 451
Homepage: <http://www.hypercharger.it>
E-Mail: support@hypercharger.it

Version history

Version	Date	Author	Description
1-1A	December 2021	Ch. Leimegger	First version
1-2	September 2022	Ch. Leimegger Dr.-Ing. M. Hörter M. Hofer A. Benetti	Extensive. Additions and adjustments
1-3	October 2022	Ch. Leimegger	Use of the crane plate / note on door hinges
1-4	November 2022	Ch. Leimegger	Update to HW Rel 6.1, modification Table 16
1-5	November 2022	Ch. Leimegger	Addition of an important note in Chap. 4.1.5.1
1-6	December 2022	Ch. Leimegger	Update Figure 5, update Figure 6, Table 4 extended, chapter 2.8.2, Table 15
1-7	December 2022	Ch. Leimegger	Correction lettering Figure 9, addition to Table 7
1-8	January 2023	Ch. Leimegger, M. Hofer	RCD requirement changed to $I_{DN} = 100 \text{ mA}$, update Table 17, Update Chap. 4.4 and 8
1-9	February 2023	M. Hofer, K. Mayr	Addition behavior in case of fire, update Figure 6, Figure 24, Table 15, adjustments language and formatting
1-10	June 2023	K. Mayr	Adjustments to Declaration of Conformity

Content

Content.....	6
Figures	8
Tables.....	9
1. Safety instructions	11
1.1. Intended use	11
1.2. User	11
1.3. Safety instructions for installation and maintenance	12
2. Product description.....	15
2.1. Charging interfaces	18
2.2. DC-Power unit / Power outputs	19
2.3. Type plate	20
2.4. Exterior view	21
2.5. Opening the HYC50	22
2.6. Door contactor.....	23
2.7. Interior view.....	24
2.8. Additional options.....	29
2.8.1. Colors HYC50	29
2.8.2. Credit card terminal.....	29
3. Packaging, transport, and storage.....	30
3.1. Packaging	30
3.2. Transport, handling, and storage.....	30
3.3. Unpacking the HYC50.....	30
4. HYC50 Installation and commissioning	31
4.1. Mechanical installation of the HYC50	31
4.1.1. Mounting the Stand	32
4.1.2. Charging cable lengths.....	33
4.1.3. Location selection	34
4.1.4. Positioning of mounting frame HYC50.....	36
4.1.5. Mounting the HYC50	37
4.1.5.1. Mounting preparation	37
4.1.6. installation of the connection cable in the cable entry	39
4.2. Electrical installation.....	45
4.2.1. Circuit diagram HYC50.....	46
4.2.2. Connecting the mains cables	48
4.2.3. Surge protection.....	49
4.3. Checks before switching on for the first time	49
4.4. Commissioning.....	50
5. Diagnosis and parameterization	52
6. Operation of the HYC50	53
6.1. Starting the charging process.....	53
6.1.1. Authentication	53
6.1.2. Charging plug selection.....	57
6.1.3. Plugging in the charging cable	59
6.2. During the charging process.....	60

22.08.2023 06:06:06

Content

6.2.1. Charging overview	60
6.3. Stop charging process.....	64
6.3.1. Wake screen.....	64
6.3.2. Stop charging.....	64
6.4 Procedure for error messages.....	68
6.4.1 Authentication failed	68
6.4.2 Charging plug defective	69
6.4.3 Error during communication setup	70
6.4.4 Connector locking failed.....	71
6.4.5 The vehicle signals an error.....	72
7. Fault description and correction.....	73
8. Maintenance.....	74
9. Repair and service	76
10. Disposal	77
11. Technical data.....	78
12. Declaration of Conformity	80

Figures

Figure 1: HYC50 with open front door (Example with one DC charging cables)	15
Figure 2: HYC50 with open front door (Example with two DC charging cables)	16
Figure 3: HYC50 with one DC charging cables	16
Figure 4: HYC50 with two DC charging cables.....	17
Figure 5: DC power characteristics in different configurations.....	19
Figure 6: Example of a type of plate for hypercharger HYC50 (without calibration law).....	20
Figure 7: Elements of the HYC50.....	21
Figure 8: Locking lid of the HYC50.....	22
Figure 9: Front door locking mechanism	22
Figure 10: Interior view of the HYC50 with one DC charging cable	24
Figure 11: Interior view of the HYC50 with two DC charging cables.....	25
Figure 12: Interior view front HYC50 (Backside with one DC charging cable)	26
Figure 13: Interior view front HYC50 (Backside with two DC charging cables)	27
Figure 14: Packed HYC50	30
Figure 15: Mounting the Stand HYC50	32
Figure 16: Cable length for the two DC outputs of the HYC50 with cable management	33
Figure 17: Recommended minimum distances for site selection	34
Figure 18: Installation height (barrier-free) and minimum distances for supply air and exhaust air	35
Figure 19: Cable bushing.....	37
Figure 20: Strain relief for different cable diameters	38
Figure 21: Circuit diagram of the HYC50.....	46
Figure 22: Authentication	53
Figure 23: Overview of the authentication options.....	55
Figure 24: Overview user guidance per authentication option	55
Figure 25: Authentication process.....	56
Figure 26: Charging plug selection.....	57
Figure 27: Language selection.....	58
Figure 28: Plugging in the charging cable	59
Figure 29: Initializing	60
Figure 30: Overview of charging process	61
Figure 31: Detailed loading overview	62
Figure 32: Load second vehicle	63
Figure 33: Charging overview with two active charging processes.....	64
Figure 34: Stop charging.....	65
Figure 35: Authentication to stop charging process.....	66
Figure 36: Process charging stop.....	66
Figure 37: Unplug the charging connector	67
Figure 38: Authentication failed.....	68
Figure 39: Charging plug defective	69
Figure 40: Error during communication setup	70
Figure 41: Connector locking failed.....	71
Figure 42: Vehicle error	72

Tables

Table 1: Overview DC Power and Options HYC50	15
Table 2: Charging interfaces	18
Table 3: Possible combinations of charging interfaces.....	18
Table 4: Components of the HYC50	28
Table 5: Load Table for Fischer dowels/anchors.....	37
Table 6: Tools needed for assembly	38
Table 7: Assembly steps HYC60	44
Table 8: Legend of the HYC50 circuit diagram.....	47
Table 9: Recommended cross-sections	48
Table 10: Checks before commissioning.....	49
Table 11: Inspections to be carried out upon commissioning	50
Table 12: Default IP address of the HYC50	52
Table 13: Fault description and correction	73
Table 14: Maintenance to be performed.....	75
Table 15: Technical data.....	78
Table 16: Mechanical Data	78
Table 17: Electrical connection data HYC50	78
Table 18: Idle power dissipation at 400V according to the display brightness	79
Table 19: Frequency bands and transmission levels of the HYC50.....	79

This page was intentionally left blank.

1. Safety instructions

This chapter contains the safety instructions that must be observed when installing, operating and maintaining the HYC50 rapid charging system for electric vehicles. Improper operation due to non-observance of the operating instructions can lead to serious injuries or damage. These safety instructions must be read carefully before installing, operating and maintaining the unit.

1.1. Intended use

The HYC50 rapid charging system for electric vehicles is intended for indoor and outdoor use to carry out rapid charging processes for electric vehicles.

Attention

The DC charging station is designed for fixed installation with attachment to the wall or with optional stand on the floor in an environment with a pollution degree class 4 and intended for locations with unrestricted access (operation by laymen).

The DC supply device for electric vehicles is supplied from an AC/ three-phase network and supports charging mode 4 (protection class I).



For the connection between the charging station (Electric Vehicle Supply Equipment, EVSE) and the electric vehicle (EV), no other DC cables are required apart from those supplied with the HYC50. The charging cable must not be modified to extend or shorten the cable range.

Do not use adapters that are not approved by the vehicle manufacturer.

The use of Y-cables or similar devices is not permitted.

1.2. User

These operating and installation instructions are intended for people who are responsible for the installation, operation, maintenance and servicing of the HYC50 rapid charging system for electric vehicles. These people should have at least a basic knowledge of high-power electrical systems and electric vehicles. Before carrying out any work, these instructions must be read carefully by both the operator and the technical personnel in charge.

1.3. Safety instructions for installation and maintenance

These warnings and instructions apply to all activities related to the installation, maintenance and servicing of the HYC50.

Attention



Failure to follow these instructions may result in serious or fatal injury and severe property damage.



The installation and maintenance of the HYC50 rapid charging system for electric vehicles may only be carried out by qualified personnel.

Before commissioning, check that the system and all connections have been properly installed.



Electrostatic discharge

The HYC50 contains components and circuit boards that are sensitive to electrostatic discharge. Sufficient ESD measures should be taken during assembly and maintenance to protect the electronic components (e.g. wearing a grounding arm strap).

Warning notice

Warning of dangerous electrical voltage



Installation and maintenance of the HYC50 may only be carried out with the supply voltage switched off. Before installing, dismantling, repairing or replacing components, the HYC50 must be disconnected from the power supply and the main switch in the device must be switched off. In addition, carry out a voltage check to ensure that the electrical voltage is disconnected from the system.

Dangerous electrical voltages (up to 1000 VDC) can be present inside the HYC50, even if all isolators are switched off.

Care must therefore be taken to ensure that unqualified persons keep away when the doors of the HYC50 are open and the discharge time are observed.

Installation, dismantling, repair or replacement of components of the HYC50 must only be carried out by technicians. The door of the HYC50 enclosure must be properly closed and locked after installation, maintenance or repair work.

Warning of hot surfaces



Some components inside the HYC50, such as the power unit, transformer and cables, may remain hot for a long time after the power supply has been disconnected.

Before dismantling, repairing or replacing components, ensure that all components have cooled down.



Heavy weight

Please note that the unit or the individual components of the unit can be very heavy.



Bruises

When assembling and disassembling components, please ensure that no persons or body parts are bruised.

Behavior in case of fire

In the event of a fire, the emergency stop switch of the external power supply – if present - must be actuated immediately (e.g. at filling stations). The instructions must be clearly displayed by the charge point operator. Furthermore, the fire must be immediately reported to the fire brigade. In the event of injured persons, the emergency services must be alarmed immediately.

The emergency numbers must be clearly displayed by the charge point operator. If there is no emergency stop switch available, the charge point operator must immediately disconnect the charging station from the external power supply directly at the mains connection point. It is pointed out that the disconnection at the mains connection point may only be carried out by authorized and appropriately trained personnel.

Persons present at the site of the fire must be immediately removed or asked to move away from the danger zone. Fire protection and firefighting regulations as well as occupational health and safety regulations in force at the place of installation of the charging station may provide that fire-extinguishing activities can only be carried out by trained persons in accordance with the relevant regulations (e.g. in Germany DIN VDE 0132 "Fire fighting in the area of electrical installations").

Corresponding instructions must be clearly displayed by the charge point operator. However, it is recommended even in the absence of a corresponding regulation, that firefighting activities are left exclusively to trained persons. When carrying out firefighting activities, a sufficient safety distance of at least 2 m from the charging station must be maintained in order to minimize the electrical risk.

Only suitable extinguishing agents for electrical equipment may be used (e.g. CO₂ fire-extinguishers, if necessary also water, whereby the distance of the spray jet to the charging station must be at least 2m in order not to be exposed to a dangerous voltage flashover).



Information



The main switch for switching off the unit is located in the lower part of the unit (see Figure 11 and Figure 13). Set the circuit breaker to position "0", this will switch off all internal components of the HYC50.

Please note possible discharge times of DC link capacitors.

Attention



For some replacement work, e.g. replacing the cable plug holders, the power supply must be switched off on the mains side. For a detailed description, please refer to the corresponding replacement instructions.

2. Product description

The HYC50 from the hypercharger product family can be equipped with the following options:

Model	Options	
	DC-Power	Charging interfaces (see chapter 2.1)
HYC50	Power-Unit with 2x 25 kW → 50 kW	1 DC charging cable
		2 DC charging cable

Table 1: Overview DC Power and Options HYC50

Classification according to DIN EN 61851-23

Depending on the configuration, the DC charging station supports up to two outputs for simultaneous operation while maintaining galvanic isolation between the mains and the vehicles and between the vehicles themselves. The design corresponds to circuit diagram 3 according to table GG.2 of the standard E DIN EN 61851-23:2018-03 (VDE 0122-2-3:2018-03).

The charging station does not support an optional ventilation function.

Figure 1 to Figure 4 show the HYC50 which can be equipped with one or two DC charging cables.



Figure 1: HYC50 with open front door (Example with one DC charging cables)

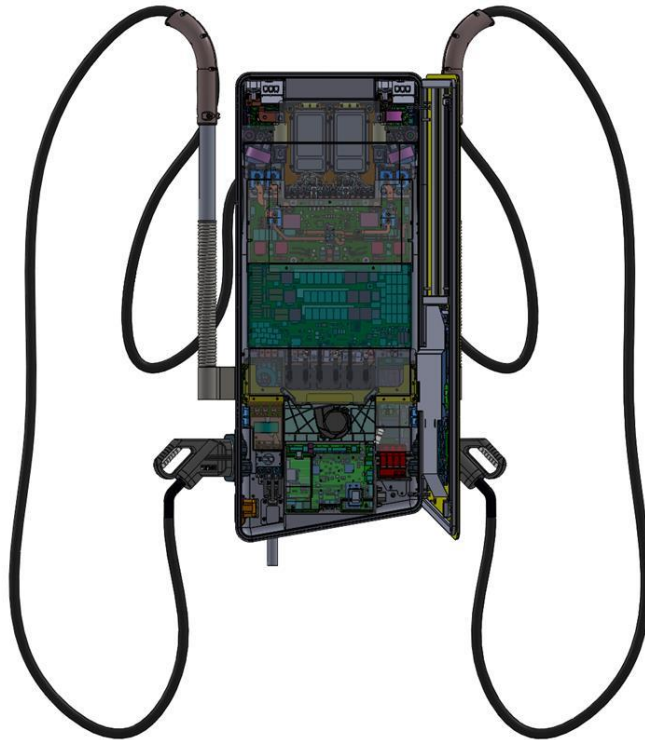


Figure 2: HYC50 with open front door (Example with two DC charging cables)

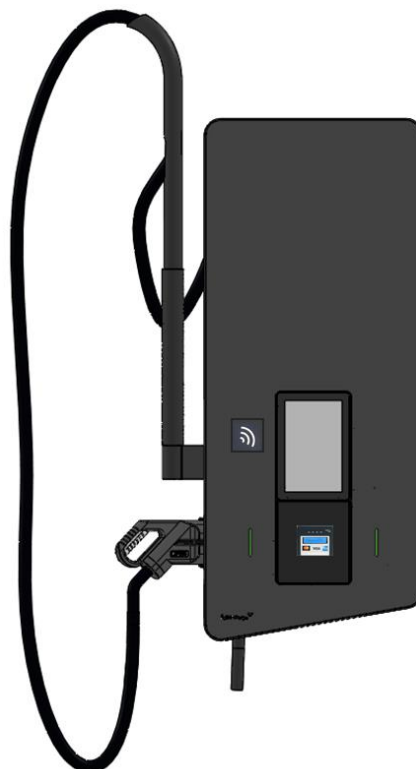


Figure 3: HYC50 with one DC charging cables

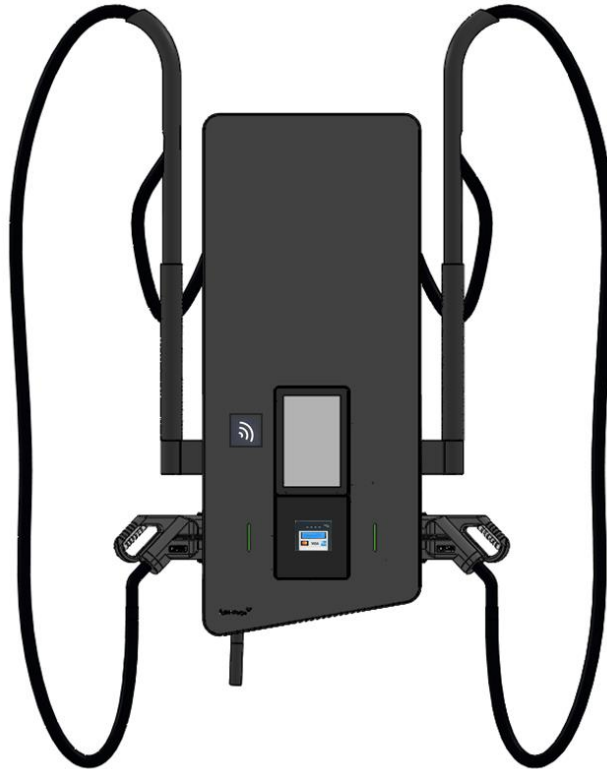


Figure 4: HYC50 with two DC charging cables

The various possibilities and options for DC charging are described in chapters 2.1.

Information



As standard, the HYC50 enclosure is supplied in "RAL Noir 2100". The front panel can be adapted to customized branding, making the charging station a flagship for your company.



Customs tariff number of the HYC50: 85044055

2.1. Charging interfaces

The following charging interfaces can be selected for the HYC50 in various combinations. Active cooling is not provided for any of the cable variants.

Charging Interface				
Charging interface	Voltage [V]		Current [A]	
	Min.	Max.	Min.	Max.
CCS1/2	150 V DC	1.000 V DC	6,5 A	150 A DC
CHAdeMO	150 V DC	500 V DC	6,5 A	125 A DC
GB/T	150 V DC	750 V DC	6,5 A	150 A DC

Table 2: Charging interfaces

Attention



The total power of the HYC50 is limited to a maximal nominal current of 90 A.

Information



The CCS1 (US) and GB/T (China) options are special options for the automotive industry.

The following combinations are possible:

Charging interfaces	
Outlet 1 (right)	Outlet (left)
CCS1/2	N/A
CCS1/2	CHAdeMO
CCS1/2	CCS1/2
CCS1/2	GB/T
N/A	GB/T
N/A	CCS1/2
N/A	CHAdeMO

Table 3: Possible combinations of charging interfaces

2.2. DC-Power unit / Power outputs

A power module with two 2x 25 kW power outputs are used internally to supply the DC charging cables installed on the HYC50. A power output can only supply one DC charging cable at a time. The HYC50 power outputs can be connected in parallel to increase the power transmitted via a DC charging cable.

Information



The usable DC power of the HYC50 is limited by the maximum current of the DC charging cable used.



The charging cables can be equipped with temperature sensors, which can lead to a derating of the maximum charging current provided when defined temperature limits are reached.

Figure 5 shows the DC power characteristics with one and two HYC50 power outputs and different cable types (HYC50 power stacks and different cable types (150 A GB/T, CCS1 and CCS2 cables, 125A CHAdeMO cable).

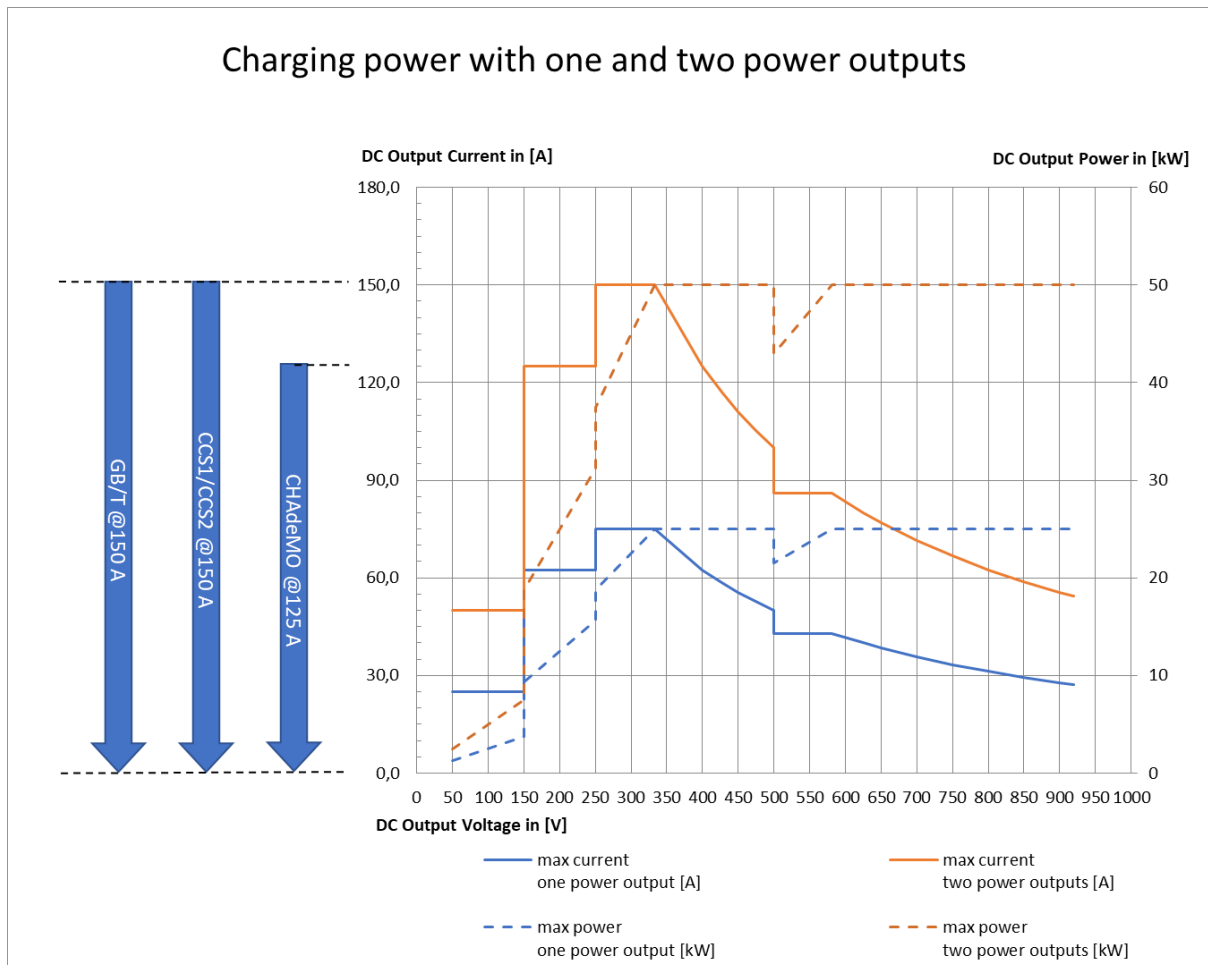


Figure 5: DC power characteristics in different configurations

tomas.daukas@elintacharge.com
 22.08.2023 06:06:06

2.3. Type plate

Depending on the configuration of the charging station, the following type of plate (as an example) may be on the unit.

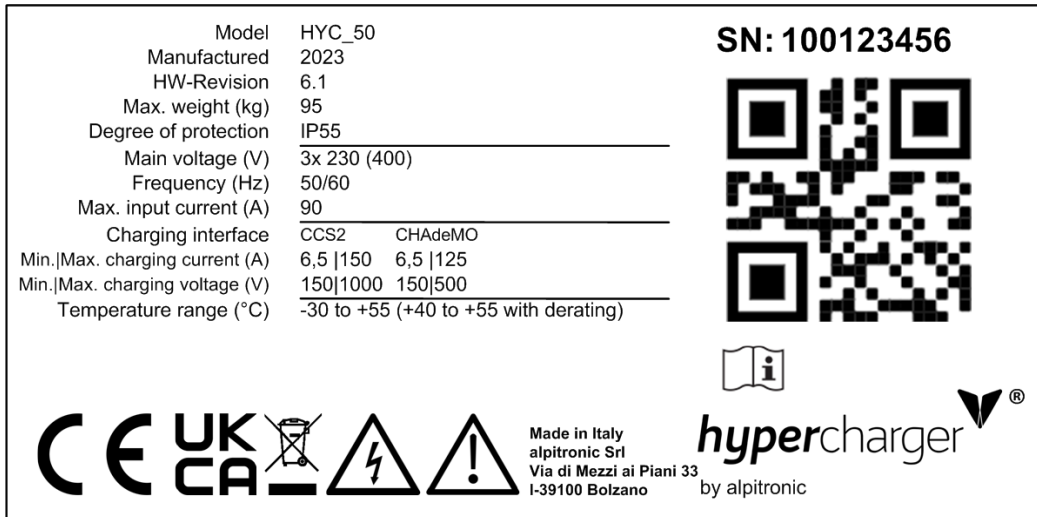


Figure 6: Example of a type of plate for hypercharger HYC50 (without calibration law)

2.4. Exterior view

The following Figure 7 shows the various elements of the unit from the outside.

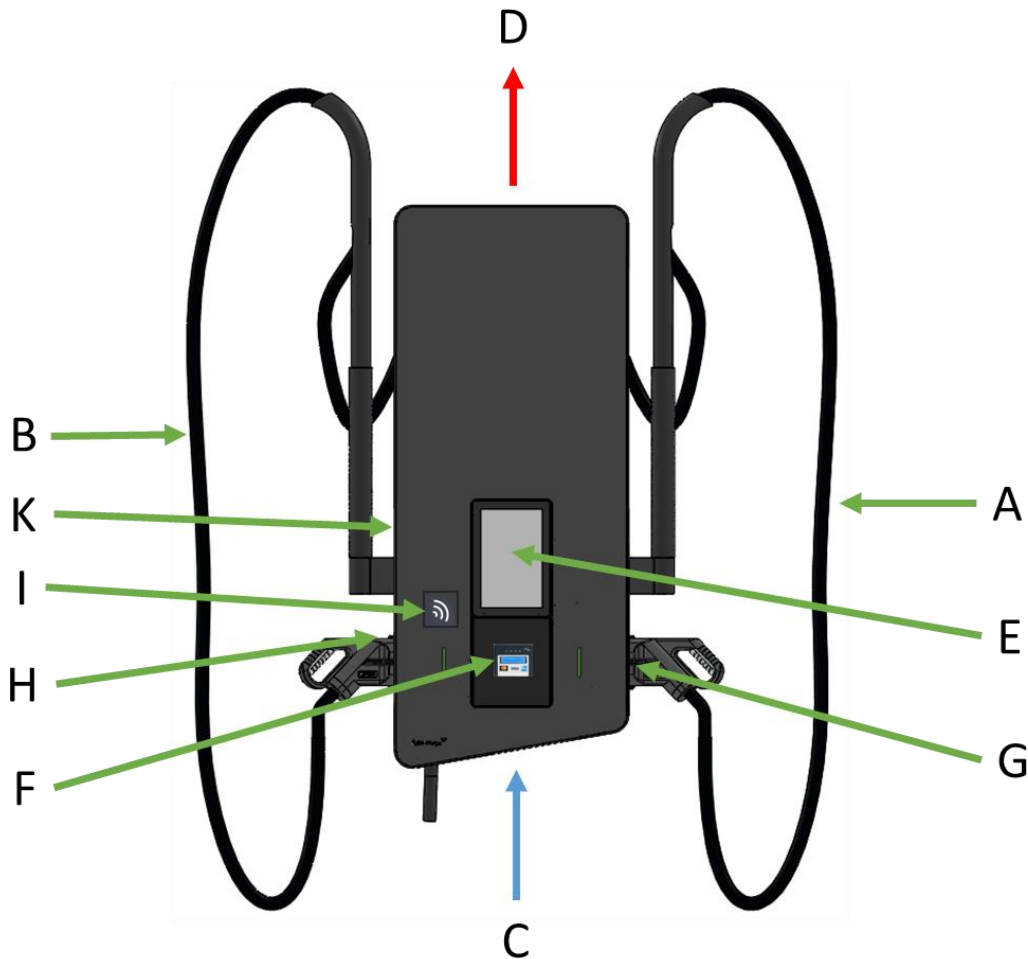


Figure 7: Elements of the HYC50

- A DC charging cable 1 (depending on configuration)
- B DC charging cable 2 (depending on configuration)
- C Air inlet
- D Air outlet
- E Display / HMI
- F RFID card reader (optional position if I equipped with credit card reader)
- G Charging plug holder 1
- H Charging plug holder 2
- I RFID card reader or credit card reader (optional)
- K Type plate

2.5. Opening the HYC50

The HYC50 has a front door that can be opened via a locking lid on the left side (below the charging plug holder). This has two locking cylinders (10/30 mm profile half cylinder).

The locking cylinder on the left (see Figure 8) is the one for alpitronic support, the customer locking cylinder is on the right (empty on delivery).

Steps to open the inlet:

- turn the key 90° in the direction shown in Figure 8
- tilt the inlet forward and down.

Steps to close the inlet:

- insert the nose of the inlet into the opening at the bottom and
- push the inlet up into the center of the opening until it snaps into place



Figure 8: Locking lid of the HYC50

After opening the locking lid, the front door lock can be released and the door opened.

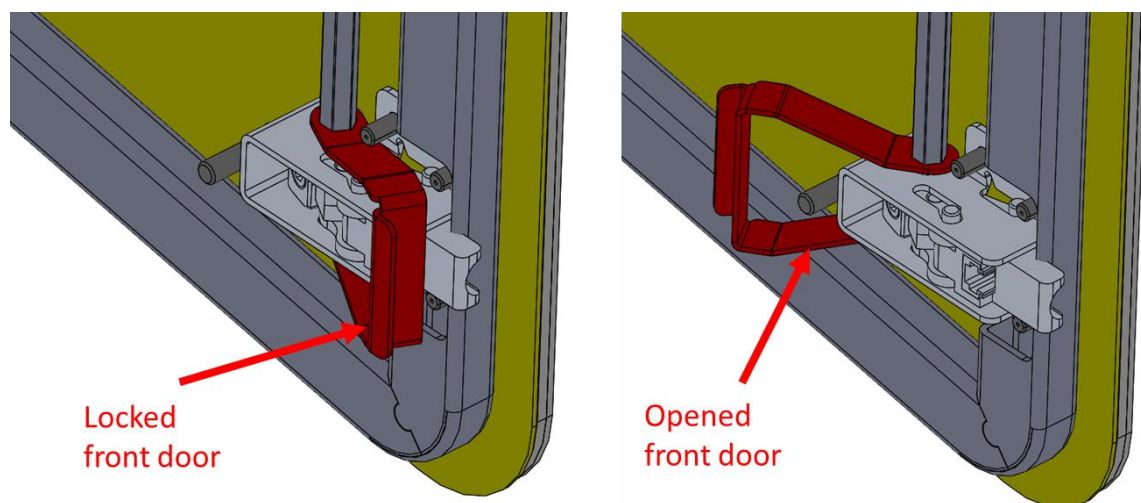


Figure 9: Front door locking mechanism

Attention



Before closing the service hatch, make sure that the front door is properly locked again.

2.6. Door contactor

To detect the opening of the HYC50 front door, door contact switches are installed as standard.

2.7. Interior view

Figure 10 and Figure 11 show the inside view of the HYC50 in top view, Figure 12 and Figure 13 show the inside view of the front door.

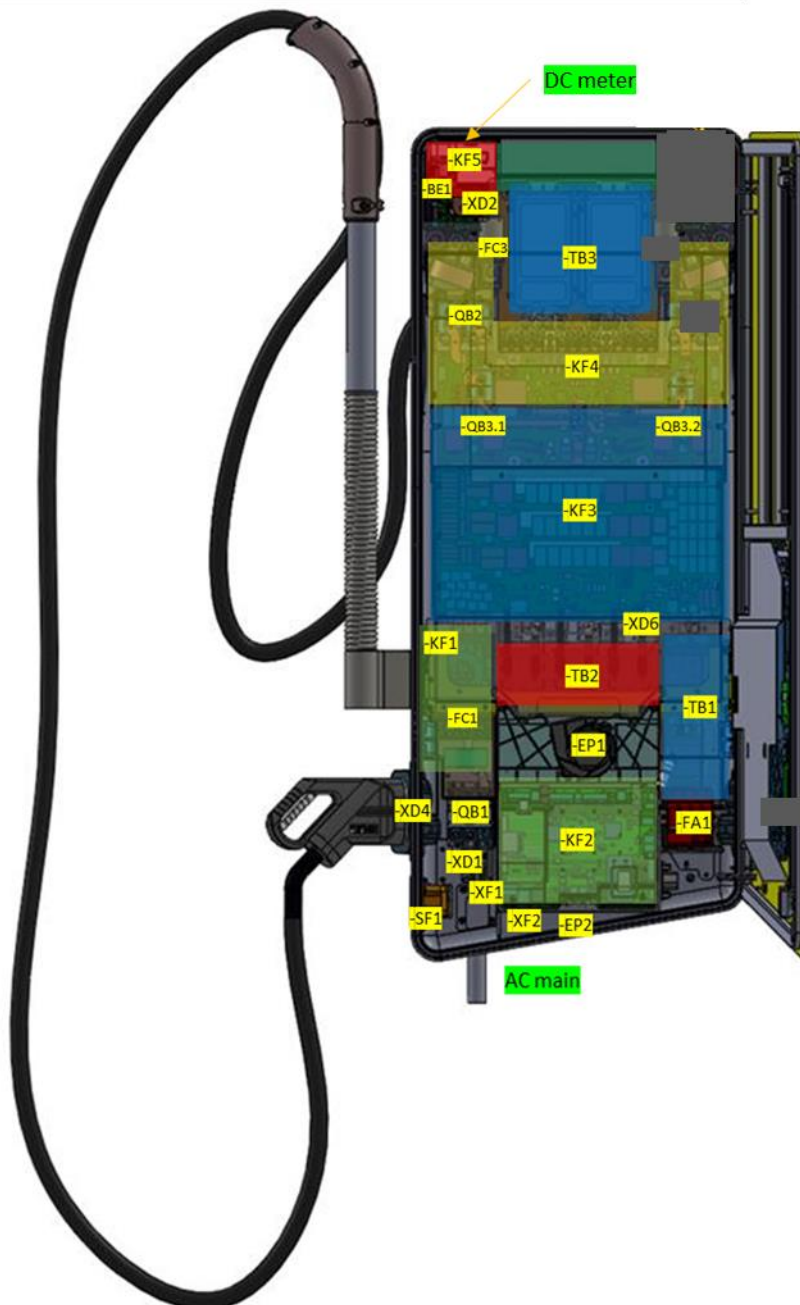


Figure 10: Interior view of the HYC50 with one DC charging cable

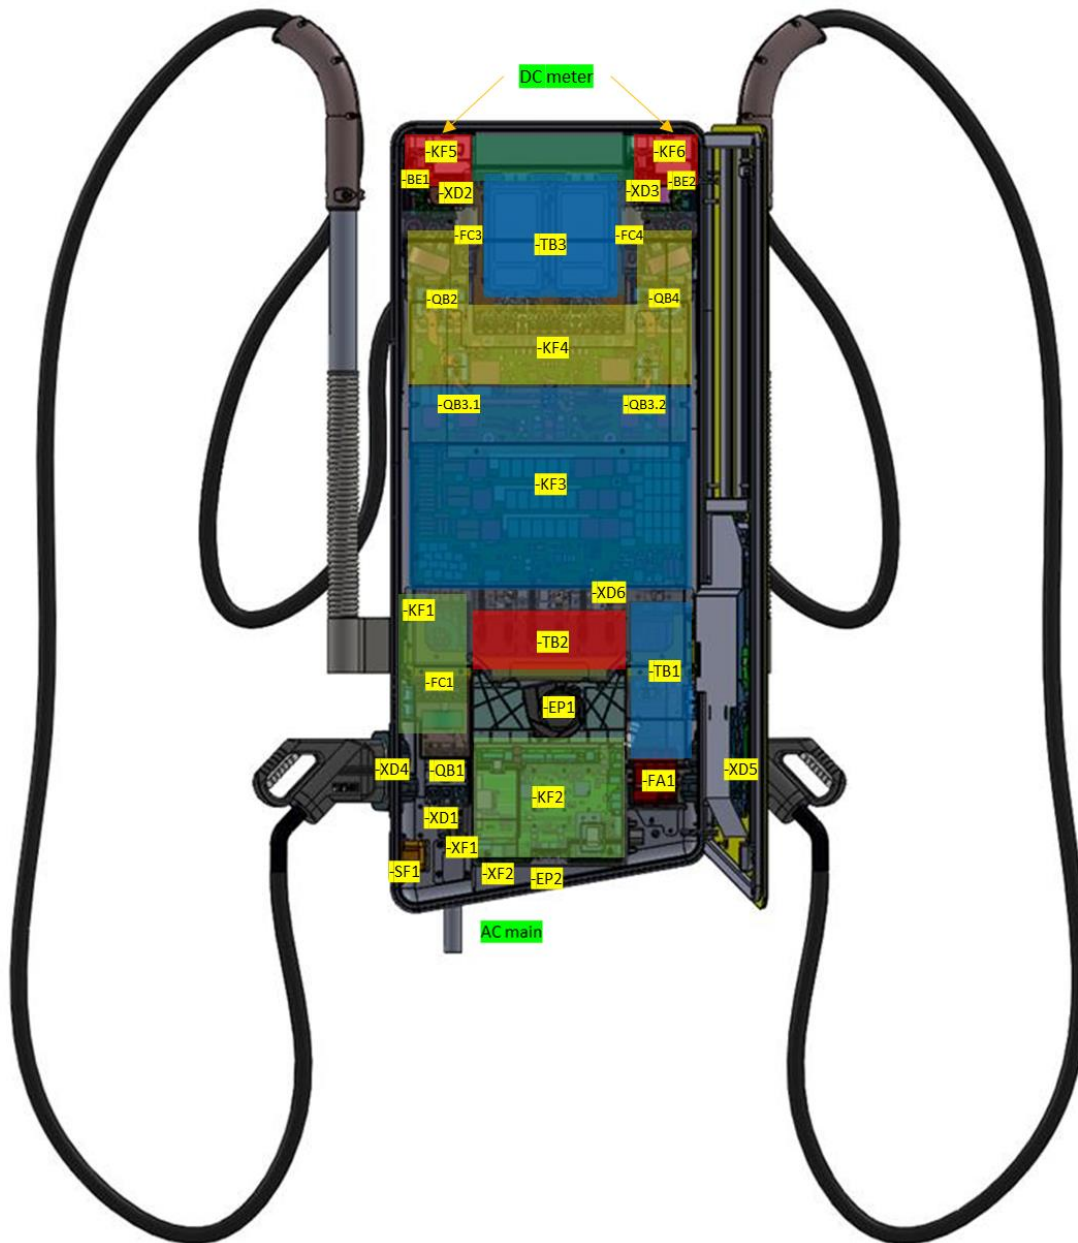


Figure 11: Interior view of the HYC50 with two DC charging cables

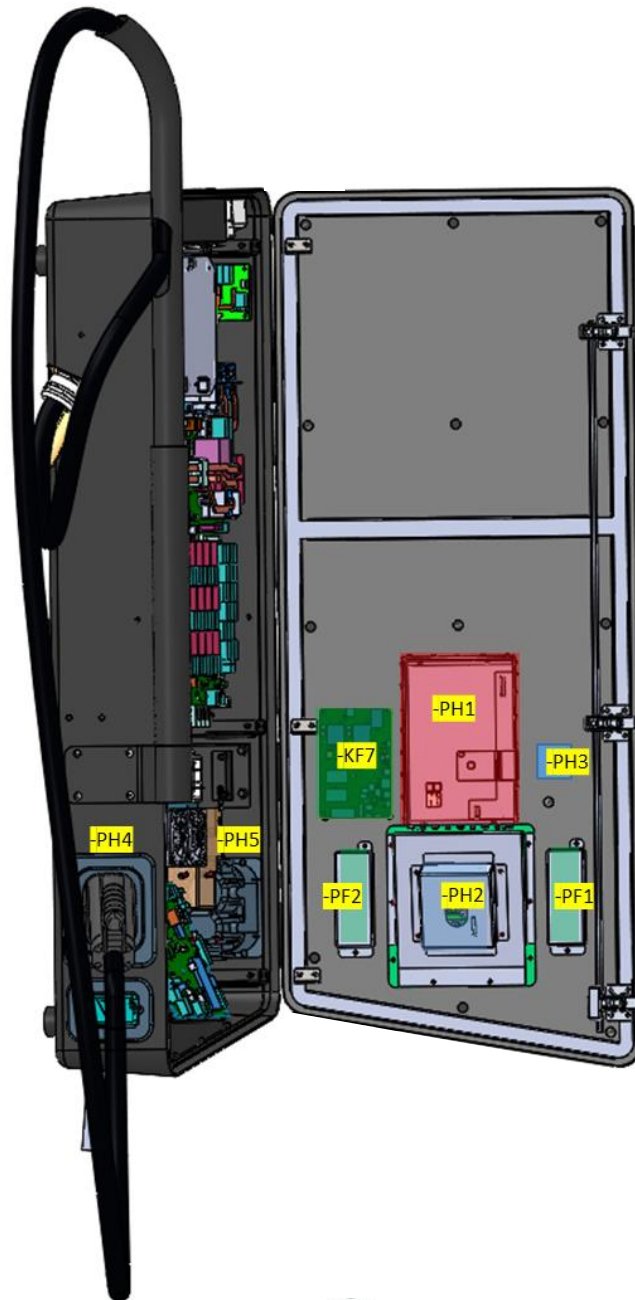


Figure 12: Interior view front HYC50 (Backside with one DC charging cable)

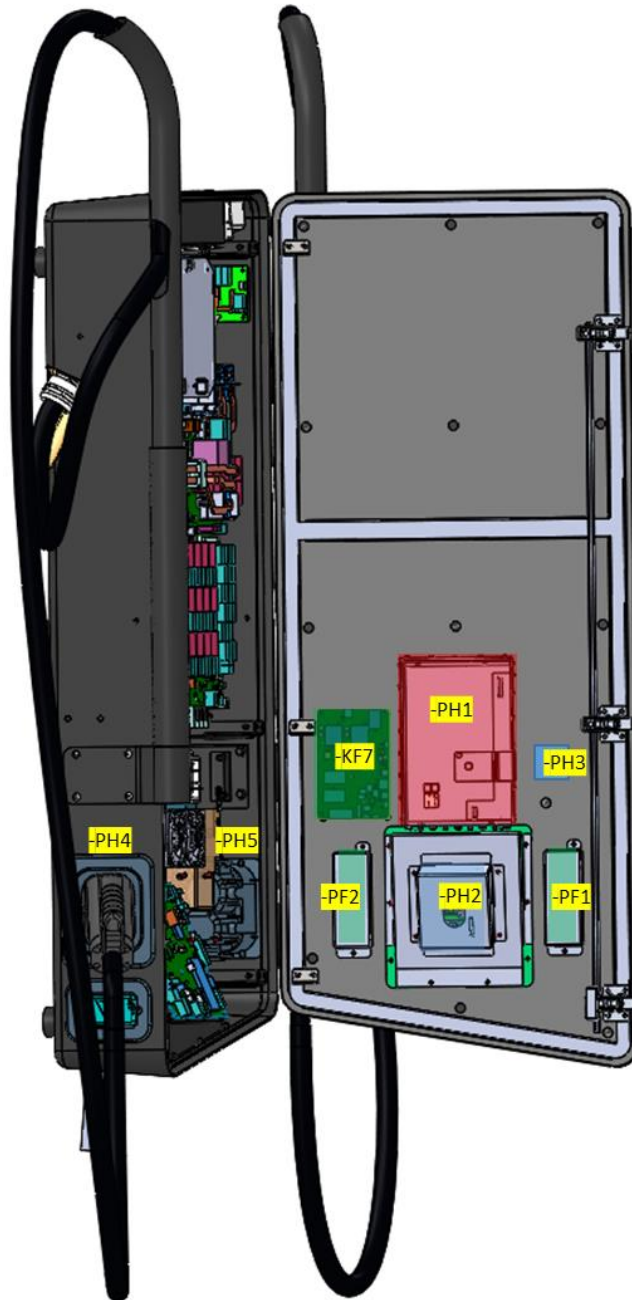


Figure 13: Interior view front HYC50 (Backside with two DC charging cables)

Table 4 describes the individual components marked in the above figures:

Identifier	Spare part no.	Description
-BE1		DC meter charging point left
-BE2		DC meter charging point right
-EP1		Fan interior
-EP2		Blower
-FC1		Input fuses HYC50 (150 A)
-FC3		Output fuse charging point left
-FC4		Output fuse charging point right
-KF1		GRID – Mains connection/fuse protection
-KF2		CTRL_CHRG – charging controller
-KF3		POWER_UNIT – AC/DC converter
-KF4		DC-output switchgear
-KF5		DC Block left
-KF6		DC Block right
-KF7		CON_FRONT – control front
-PF1		LED-strip left
-PF2		LED-strip right
-PH1		Touch display
-PH2		Card reader terminal (optional position)
-PH3		Terminal (RFID), antenna
-PH4		CTRL_DISPEXT_50 – Calibration law display charging point left
-PH5		CTRL_DISPEXT_50 – Calibration law display charging point right
-QB1		Main switch / 3P
-QB2		DC-relay charging point left
-QB3		DC-relay parallel switching relay power modules
-QB4		DC-relay charging circuit right
-SF1		Door contact
-TB1		HV_PSU – 24V/48V auxiliary power supply
-TB2		PFC coil
-TB3		Transformer
-XD1		Connection terminals mains input
-XD2		DC busbar for vehicle line connection XD4 (DC output left)
-XD3		DC busbar for vehicle line connection XD5 (DC output right)
-XD4		DC charging connection left (depending on configuration)
-XD5		DC charging connection right (depending on configuration)
-XD6		DC link connector
-XF1		Ethernet network connector (service)
-XF2		Ethernet network connector (client-LAN)

Table 4: Components of the HYC50.

Information



The Ethernet connection XF1 can be used for load management.

2.8. Additional options

2.8.1. Colors HYC50

The HYC50 housing is delivered in “RAL Noire 2100” as standard. The front bezel can be customized with custom branding, making the charging station a statement of your business.

2.8.2. Credit card terminal

alpitronic installs contactless readers from various manufacturers and providers. Before installing the credit card terminal, the customer must conclude an agreement with a payment provider such as BS-Payone, Concardis or CCV. alpitronic then receives the CCV terminal configured on the payment provider, which is installed in the charging station. The provider's terminal ID is sent to alpitronic by the customer to alpitronic and played on the terminal (alternatively, this can also be configured by the customer after delivery of the hypercharger).

A credit card terminal provided by the customer can also be installed, provided it is a compatible model already used by alpitronic.

The credit card terminals usually support all common credit and bank cards, the payments made can be viewed in the backend with a time delay.

3. Packaging, transport, and storage

3.1. Packaging

Figure 14 shows the packaging of the HYC50, in which it is delivered.



Figure 14: Packed HYC50

3.2. Transport, handling, and storage

The device is delivered packed on a pallet. During transport and storage, max. 4 devices (pallet with packaging) may be stacked on top of each other.

Attention



The hypercharger must be stored in its original packaging in a dry environment from -40 °C to + 55 °C.

3.3. Unpacking the HYC50

See attached Video.

4. HYC50 Installation and commissioning

This chapter describes the mechanical assembly and electrical installation of the HYC50. It is recommended to assemble and install the HYC50 according to the following steps:

- Location selection (Chapter 4.1.3)
- Positioning mounting frame HYC50 (Chapter 4.1.4)
- Connection area of the HYC50 (Chapter 4.1.6)

4.1. Mechanical installation of the HYC50

The following figure lists the relevant components for the mechanical installation:

Attention



Before installation, compliance with all legal requirements for the installation site (e.g. tilt resistance, impact protection, frost exposure, etc.) must be checked.



Each loading outlet must be as close as possible to the car park to be served, taking into account ergonomics and mechanical impact protection.



In Norway, charging stations for electric vehicles must be located far enough away from a potentially explosive area so that charging cannot take place within the potentially explosive area.



When selecting the installation height of the charging station, please ensure that the plug holder of the charging station is at a height above the ground in the range of 0.5 m to 1.5 m.
For barrier-free installation, the height specifications in Figure 18 must be observed.

4.1.1. Mounting the Stand

The base of the HYC50 can be fixed to the ground via 4 bolts M12 (see Figure 15). For this purpose, own foundation bases are optionally offered.

However, the installation can also be carried out on any own foundation. The sufficient mechanical strength of the foundation plate must be taken into account.

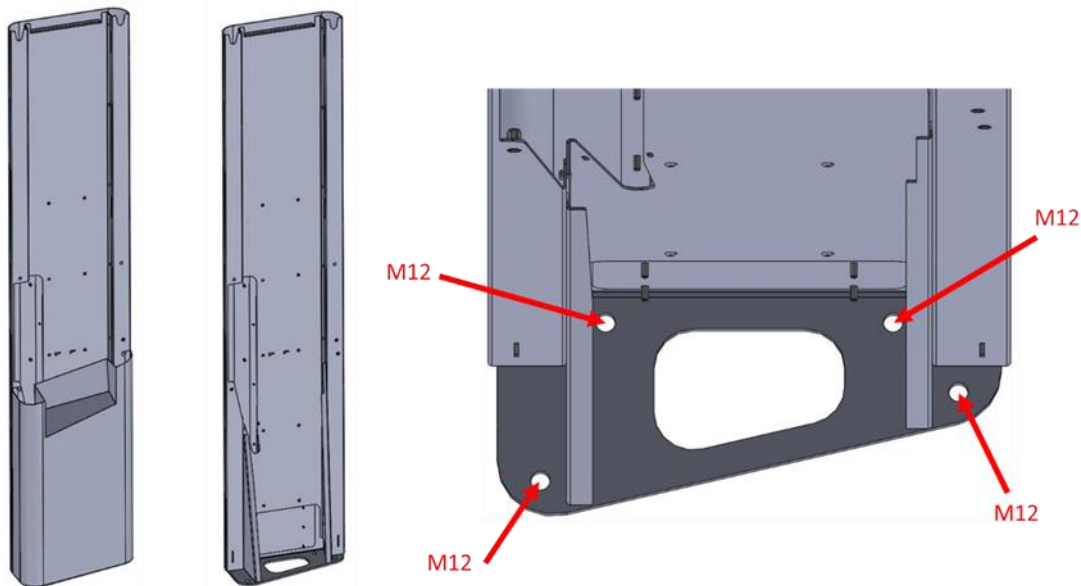


Figure 15: Mounting the Stand HYC50

4.1.2. Charging cable lengths

Attention



Please make sure that there are no sharp-edged corners within the operating radius of the charging cables so that the insulation of the charging cables is not damaged.

In the standard configuration, the HYC50 is equipped with a cable length of 2,7 m. If the optionally available cable management is selected, the cable length is extended to approx. 4,45 m. Figure 16 shows the operating radius (4.15m) of the cables for the two DC outputs of the HYC50. Longer cable lengths can also be ordered as an option.

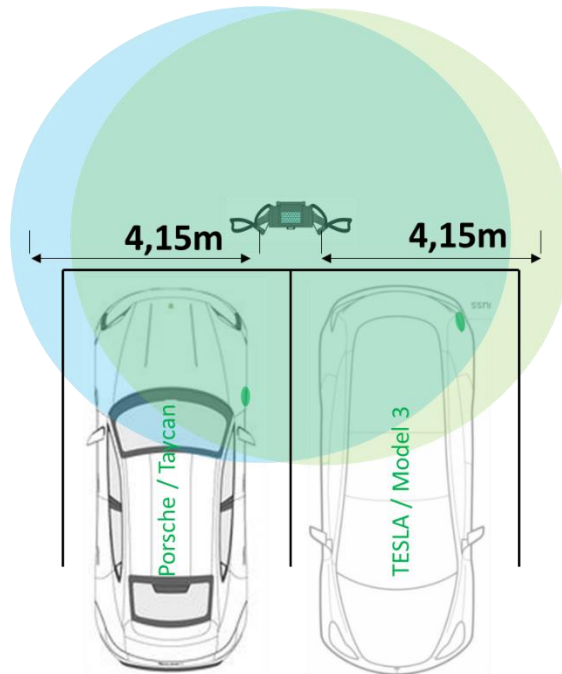


Figure 16: Cable length for the two DC outputs of the HYC50 with cable management

4.1.3. Location selection

When installing the HYC50, it must be ensured that a minimum distance to possible objects around the HYC50 is maintained in order to ensure sufficient air flow and to have enough space available for possible service or maintenance work.

Attention



The position of the HYC50 is to be selected, taking into account the impact protection that may be required, so that possible damage due to foreseeable circumstances is avoided.

Figure 17 shows the recommended minimum clearances to be provided when selecting a location for a HYC50.

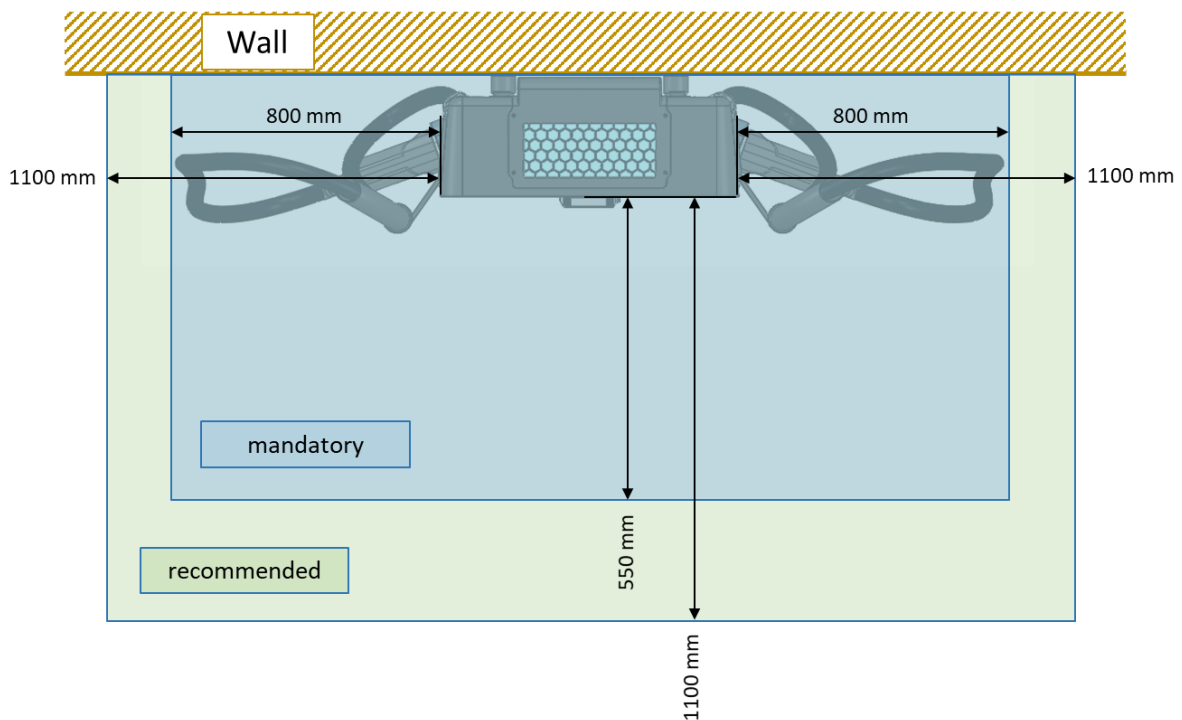


Figure 17: Recommended minimum distances for site selection

The recommended distances are designed for convenient maintenance of the HYC50, the minimum distances represent the absolute minimum for maintenance work, e.g. to be able to exchange a power unit.

The ground conditions should be as flat and level as possible in the areas shown.

Attention



The legal minimum widths for escape routes must be observed in any case.



Before installation, compliance with all legal requirements for the installation site (e.g. tilt resistance, impact protection, frost exposure, etc.) must be checked.



Each charging cable must be located as close as possible to the parking space to be supplied, taking into account ergonomics and mechanical impact protection. In doing so, observe the cable radius (Figure 16)

Information



The ground conditions should be as flat and level as possible in the areas shown.

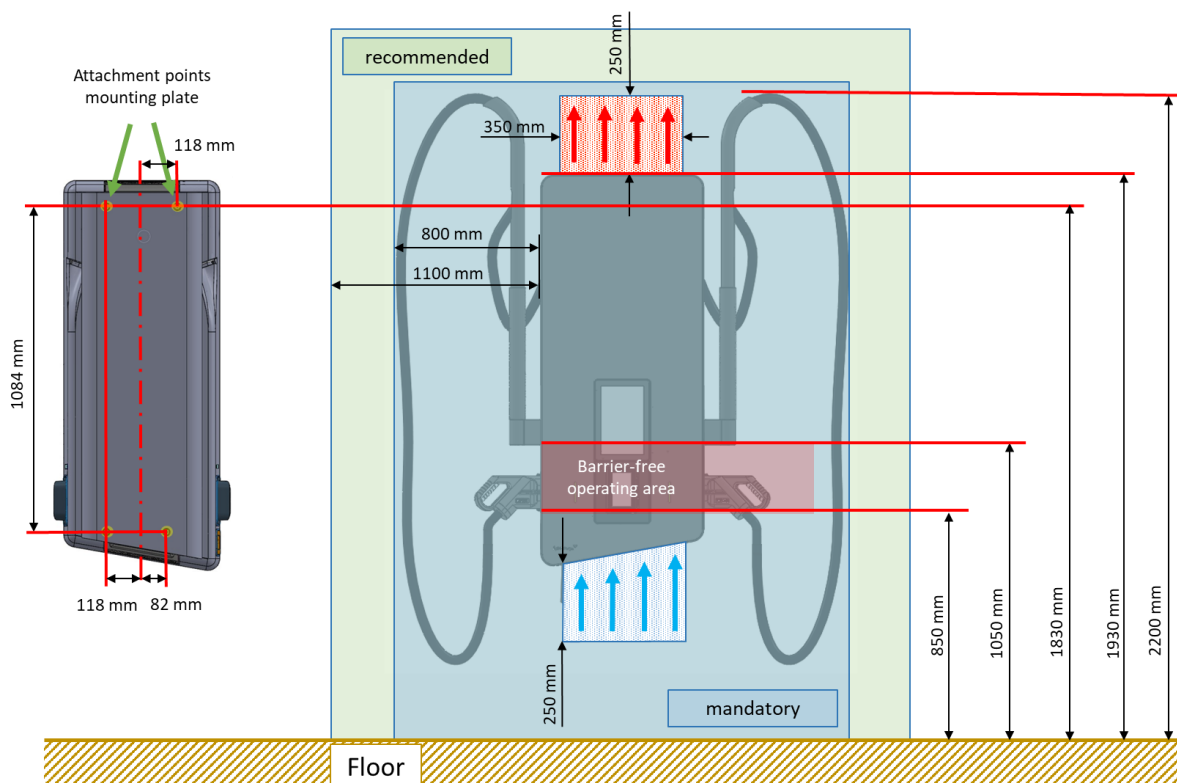


Figure 18: Installation height (barrier-free) and minimum distances for supply air and exhaust air

For an easy replacement of the modules, the suggested dimensions should be adhered to.

If HYC50 is installed in a closed or even partially closed environment, the exhaust air must be prevented from being reintroduced into the supply air circuit. Impairments to the air circulation can lead to a reduction in the charging station's performance.

The minimum distances to obstacles in the supply and exhaust air areas specified in Figure 17 must be observed. If the charging station is to be installed without barriers, the lower edge of the display must be within a range of 850 ... 1050 mm above the ground. This is the case when the uppermost fastening points of the fastening frame are at a height of 1830 mm above the ground.

The necessary mounting height of the mounting frame is shown in Figure 18.

The following information comes from a publication of the German insurers on loss prevention (VdS 3471):

- No highly flammable materials should be stored in the immediate vicinity of the charging station.
- Charging stations are not permitted in fire-hazardous premises in accordance with VdS 2033, explosion-hazardous or explosives-hazardous areas (areas with e.g. explosives or pyrotechnics) due to the existing hazards.
- The installation of a fire alarm system is recommended - where appropriate - in order to detect a fire at an early stage and to fight it in time.
- When installing in garages, the garage regulations must be taken into account.
- An additional overvoltage protection device is recommended in the power supply circuit.

Attention



The outlet temperature of the charger's cooling airflow can reach temperatures up to 75°C

4.1.4. Positioning of mounting frame HYC50

Figure 18 shows the mounting height for the mounting frame (center of topmost mounting points) if barrier-free installation is desired.

In this case, the lower edge of the display is at a height of 1020 mm above the floor and thus the touch buttons on the display are at a height of 1020...1050 mm.

To mount the HYC50 on the stand as shown in Table 6, first hook the catch on the top into the retaining point provided. Then screw the bottom of the unit through the holes in the housing to the stand frame or mounting frame for wall mounting.

By adjusting the screw-on points, existing wall slopes can be compensated for up to an angle of approx. ± 0.8 degrees (15 mm).

To fix the mounting plate to the wall, M6 screws anchors/dowels with a length of 65 mm are recommended. A suitable fastening system from Fischer is shown in Table 5.

DuoPower											
Highest recommended loads ⁹⁾ for a single anchor. The given loads are valid for wood screws with the specified diameter.											
Type		5 x 25	6 x 30	6 x 50	8 x 40	8 x 65	10 x 50	10 x 80	12 x 60	14 x 70	
Wood screw diameter	[mm]	4	5	5	6	6	8	8	10	12	
Min. edge distance concrete	c_{min} [mm]	30	35	35	50	50	65	65	80	100	
Recommended loads in the respective base material F_{rec} ²⁾											
Concrete	≥ C20/25	[kN]	0.40	0.95	1.65	1.10	2.30	2.15	4.20	3.30	5.30
Solid brick	≥ Mz 12	[kN]	0.30	0.50	0.55	0.62	0.69	1.20	1.45	1.30	1.35
Solid sand-lime brick	≥ KS 12	[kN]	0.50	1.00	1.60	1.25	2.25	2.20	3.85	2.80	4.50
Aerated concrete	≥ AAC 2 (G2)	[kN]	0.05	0.10	0.15	0.10	0.16	0.20	0.30	0.24	0.35
Aerated concrete	≥ AAC 4 (G4)	[kN]	0.25	0.38	0.55	0.42	0.60	0.60	1.10	1.00	1.45
Vertically perforated brick	≥ Hlz 12 ($\rho \geq 0.9 \text{ kg/dm}^3$)	[kN]	0.13	0.15	0.17	0.25	0.40	0.25	0.40	0.35	0.40
Perforated sand-lime brick	≥ KSL 12 ($\rho \geq 1.6 \text{ kg/dm}^3$)	[kN]	0.40	0.60	0.60	0.70	1.00	0.70	2.00	0.75	1.50
Gypsum block	($\rho \geq 0.9 \text{ kg/dm}^3$)	[kN]	0.10	0.18	0.37	0.25	0.50	0.35	0.65	0.50	0.50
Gypsum fibreboard	12.5 mm	[kN]	0.24	0.33	0.35	0.35	-	0.50	-	-	-
Gypsum plasterboard	12.5 mm	[kN]	0.12	0.15	0.15	0.15	-	0.15	-	-	-
Gypsum plasterboard	2 x 12.5 mm	[kN]	0.13	0.15	0.24	0.20	0.32	0.30	-	-	-
Mattone Forato Typ F8		[kN]	0.30	0.30	-	0.25	-	0.25	-	-	-
Tramezza Doppio UNI 19		[kN]	0.15	0.15	0.23	0.15	0.30	0.20	0.52	0.35	0.35
Sepa Parpaing		[kN]	0.30	0.45	0.25 ³⁾	0.45	0.45 ³⁾	0.45	0.45 ³⁾	0.60 ³⁾	0.60 ³⁾

Table 5: Load Table for Fischer dowels/anchors

4.1.5. Mounting the HYC50

4.1.5.1. Mounting preparation

Before mounting the connection cable, the strain relief suitable for the cable diameter should be selected and the cable bushing should be cut off at the corresponding point of the sealing cone so that both parts can achieve their optimum functionality. The matching cable diameters (24 ... 35 mm) are stamped on the strain reliefs so that there is no risk of confusion.

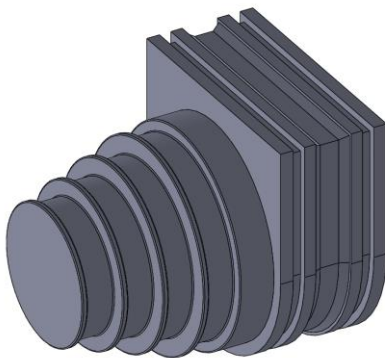


Figure 19: Cable bushing

Attention



Due to the existing sealing concept, only a sheathed cable with the specified outer diameter is permitted as a connection cable (only cable, no individual cables for outer conductor and protective conductor)



Figure 20: Strain relief for different cable diameters

The following tools are needed for assembly:

Scissors/knife to open the packaging	
Cordless screwdriver	
<ul style="list-style-type: none"> • TX10 Attachment for cordless screwdriver • TX20 Attachment for cordless screwdriver • TX30 Attachment for cordless screwdriver 	
<p>Alternative to cordless screwdriver</p> <ul style="list-style-type: none"> • TX10 Screwdriver • TX20 Screwdriver • TX30 Screwdriver 	

Table 6: Tools needed for assembly


Attention




The housing and thus also the cable entry must comply with IP55 tightness!
Due to the design of the cable bushing, this can only be achieved if the supply line is designed as a sheathed cable. Cabling with individual conductors is not permitted.

4.1.6. installation of the connection cable in the cable entry

After the connection cable has been stripped and the phases have been roughly cut off, it can be fixed in the plastic half-shell of the cable entry with the installed cable bushing using the strain relief (TX20). Before this, the cable bushing must be cut off at the appropriate point for the cable diameter using scissors/knives. During installation, make sure that the sealing contour follows the existing sealing groove. The sealing cylinder points inwards (see picture).

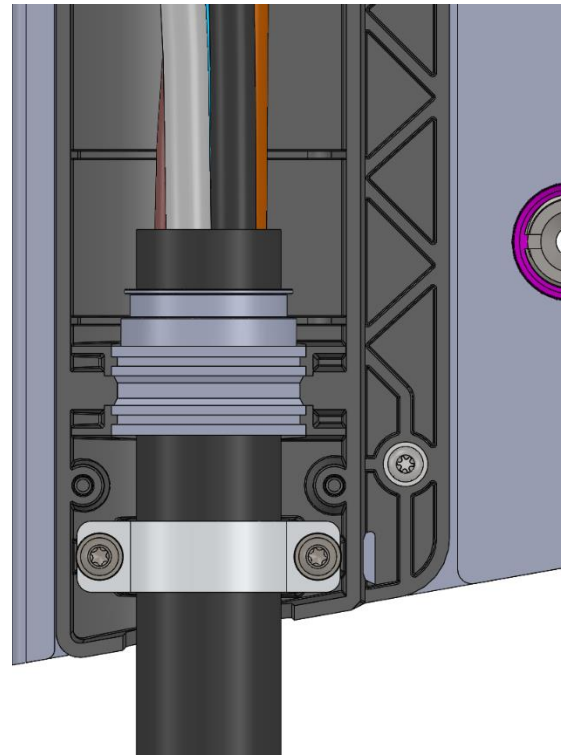

The individual strands must be cut and stripped in the sections shown in the figure, so that contacting is possible. The length of the remaining insulation of the cable, which is inside the cable entry, must be selected so that the cable bushing still seals on it.

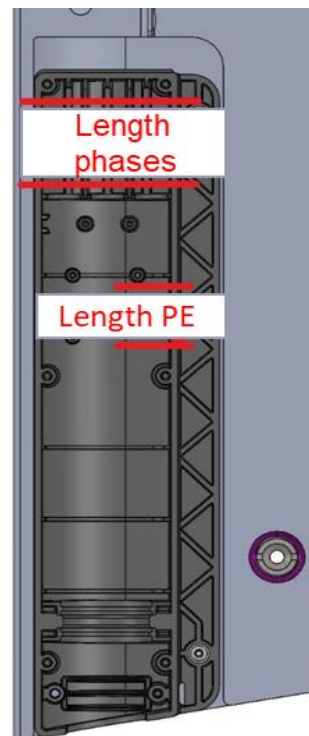

Contacting with clamps:

Clamps are used for contacting between the individual strands of the connection cable and the flexible cables; these should contact the two cables with each other as shown in the picture. The flexible cable is always on top.




The clamp for the PE connection is attached turned 90° The orientation of the clamps for the phases is given by the ribs in the connection area.

The flexible cable for the PE connection can be recognized by the fact that a cable lug is mounted at the other end.


The connecting cable may have a cross-section of 25...50 mm².

Annotation:



In the special case of using a fine-core sheathed cable with rectangular crimping (tool see figure on the right) a 3x50mm²+PE cable can be connected to the core ends.

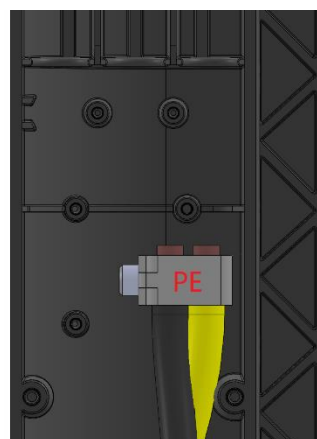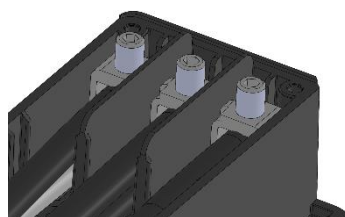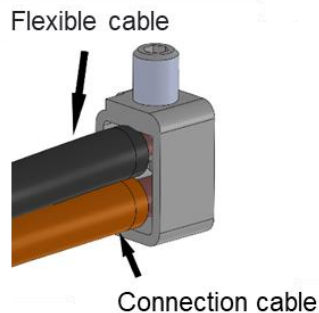


To protect the cables of the phases, an intermediate plastic insert is mounted above the PE connection
Required tool: TX10

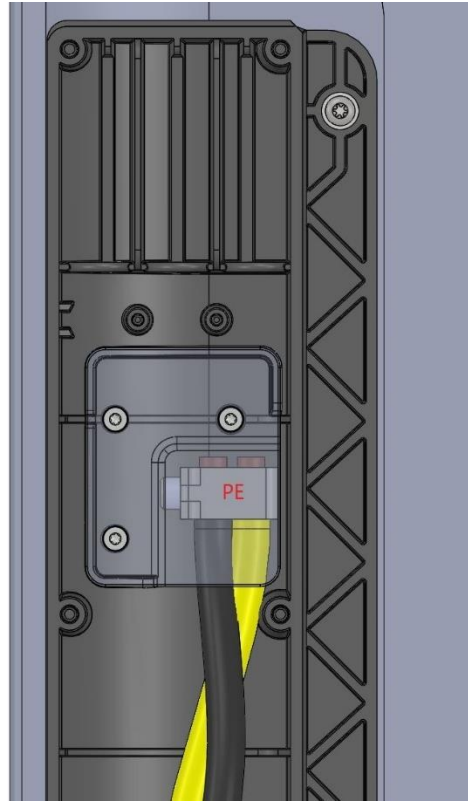

The remaining cables are held in position with the help of a cable fixation. To position them more easily, you can use the two ribs (shown in red) as a guide.
In this step, care must be taken that the insulation of the cables is not pinched between the plastic parts and thus damaged.
Required tool: TX10

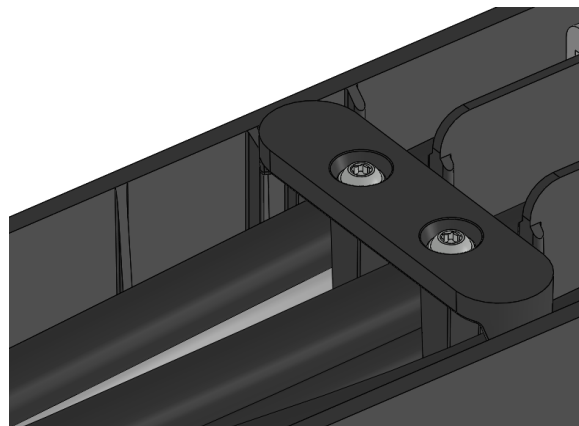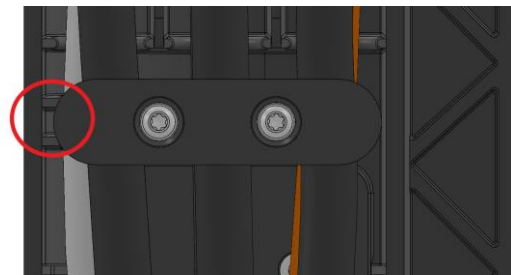

The flexible cables must now be fed through the cutouts provided in the cover and the cover placed on the housing and fixed in place.
Required tool: TX20

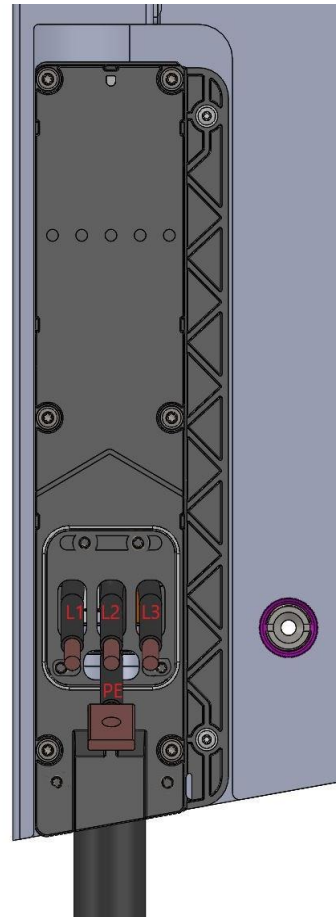


The unit can now be lifted onto the pedestal or the back plate using the assembly crane.




Please note that when lifting the device using a crane hook, only the specially provided crane plate (can be ordered as an option or is included in the scope of delivery of the assembly crane) may be used!



Under no circumstances should crane lugs with a thread be inserted into the 4 threaded bolts, since the transverse forces and bending moments that occur during lifting can impair the tightness of the housing!

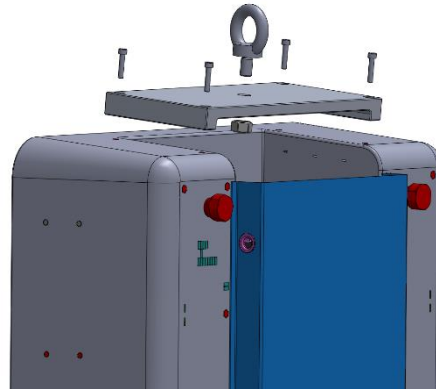

As soon as the HYC50 hangs securely on the two upper locking bolts, the cables can be routed inside the unit.

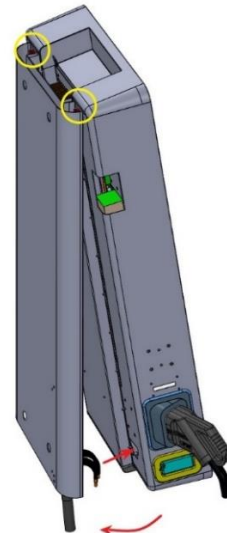

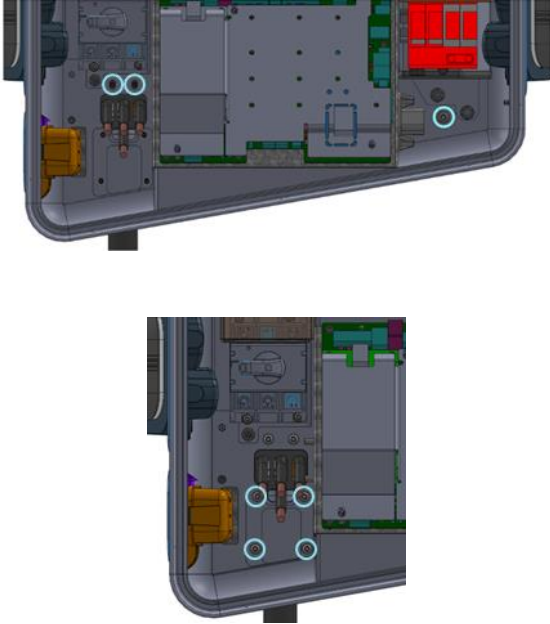
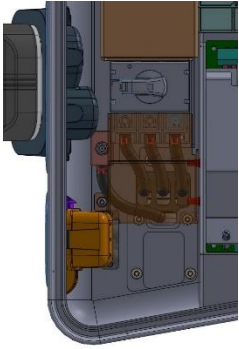
<p>Now the device only has to be fixed to the back plate at the marked points (TX20 and TX30). The M6x16 screw (TX30) on the right must be tightened with a sealing washer with a torque of 10 Nm. The two M4x16 screws (TX20) on the left must be tightened with a sealing washer with a torque of 4 Nm.</p> <p>It's crucial to mount the protection cover below the connection point of the three phases to the main switch (M4x16, Torque: 2,5 Nm).</p> <p>The three phases have to be connected to the main switch (Torque: 5,5 Nm) and the PE connection to the housing (Torque: 10 Nm).</p>	
<p>The mounting of the touch protection (Torque: 2 Nm) finishes the mounting process.</p>	

Table 7: Assembly steps HYC60

4.2. Electrical installation

The dimensioning of the cables and the protective devices outside the HYC50 must be carried out according to the local regulations and in compliance with the technical specifications of the HYC50.

4.2.1. Circuit diagram HYC50

Figure 21 shows the circuit diagram of the HYC50.

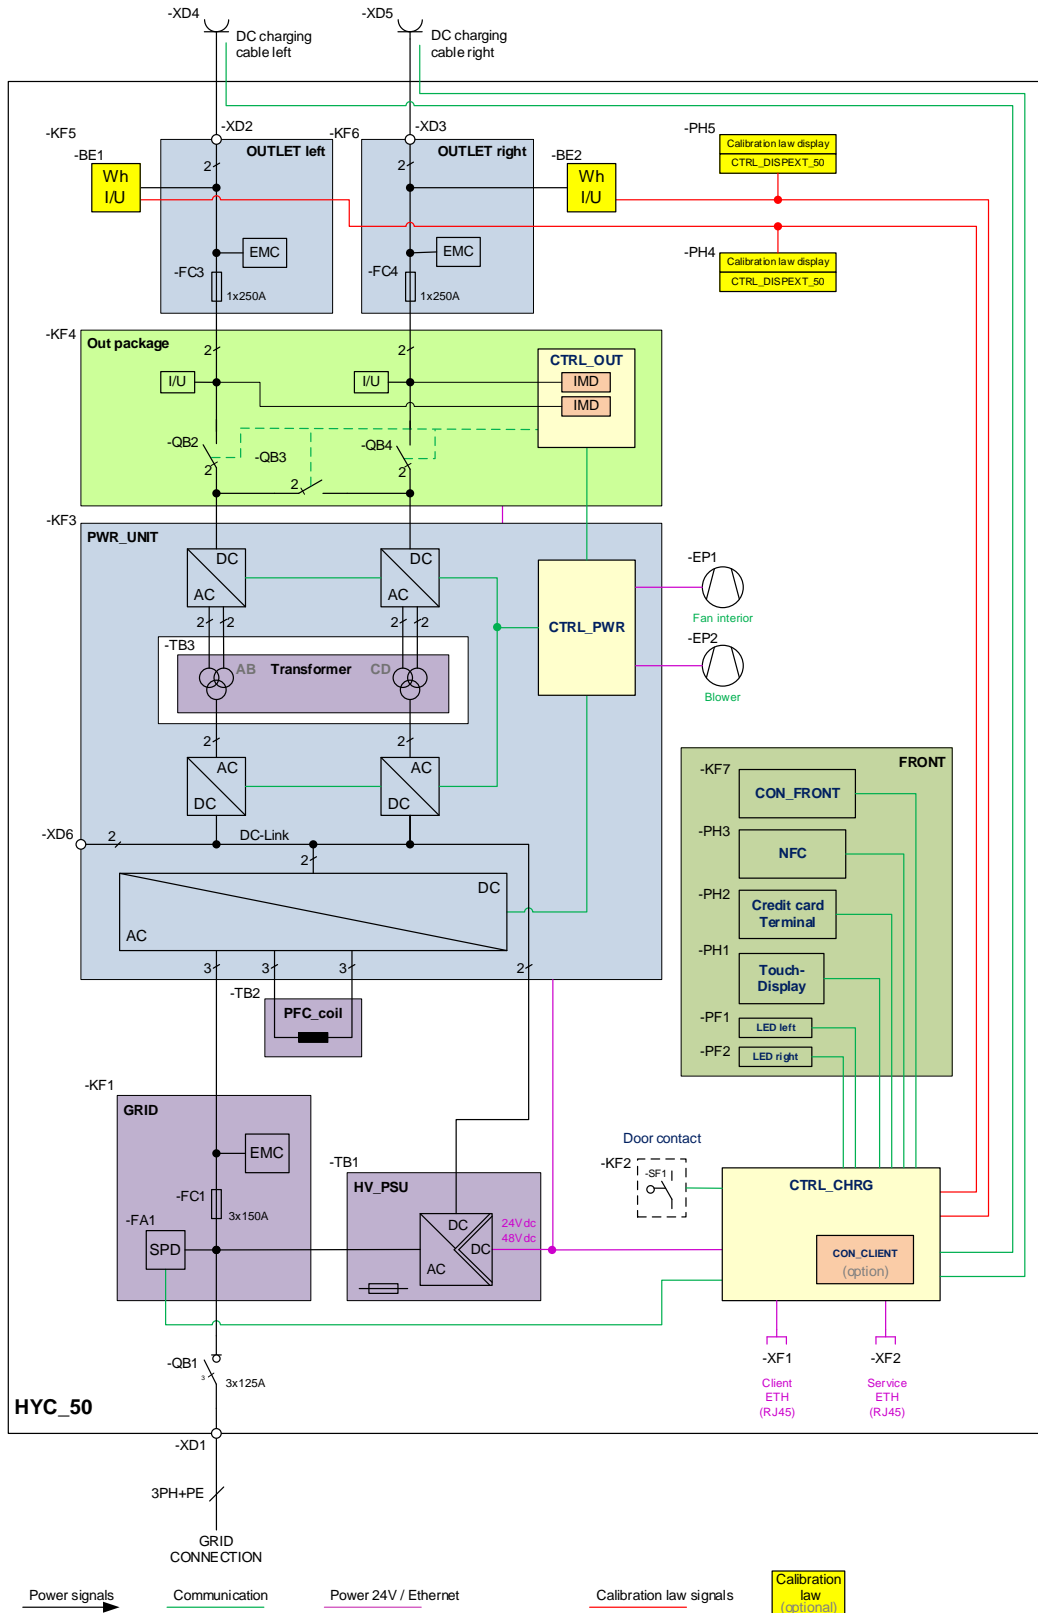


Figure 21: Circuit diagram of the HYC50

Identifier	Description
-BE1	DC meter charging point left
-BE2	DC meter charging point right
-EP1	Fan interior
-EP2	Blower
-FA1	Integrated surge protection (SPD)
-FC1	Input fuses HYC50 (150 A)
-FC3	Output fuse charging point left
-FC4	Output fuse charging point right
-KF1	GRID – Mains connection/fuse protection
-KF2	CTRL_CHRG – charging controller
-KF3	POWER_UNIT – AC/DC converter
-KF4	DC-output switchgear
-KF5	DC Block left
-KF6	DC Block right
-KF7	CON_FRONT – control front
-PF1	LED-strip left
-PF2	LED-strip right
-PH1	Touch display
-PH2	Card reader terminal (optional position)
-PH3	Terminal (RFID), antenna
-PH4	CTRL_DISPEXT_50 – Calibration law display charging point left
-PH5	CTRL_DISPEXT_50 – Calibration law display charging point right
-QB1	Main switch / 3P
-QB2	DC-relay charging circuit left
-QB3	DC-relay parallel switching relay power modules
-QB4	DC-relay charging circuit right
-SF1	Door contact
-TB1	HV_PSU – 24V/48V auxiliary power supply
-TB2	PFC coil
-TB3	Transformer
-XD1	Connection terminals mains input
-XD2	DC busbar for vehicle line connection XD4 (DC output left)
-XD3	DC busbar for vehicle line connection XD5 (DC output right)
-XD4	DC charging connection left (depending on configuration)
-XD5	DC charging connection right (depending on configuration)
-XD6	DC link connector
-XF1	Ethernet network connector (service)
-XF2	Ethernet network connector (client-LAN)

Table 8: Legend of the HYC50 circuit diagram

4.2.2. Connecting the mains cables

The HYC50 charging stations can be used in TT and TN-S, TN-C and TN-C-S type supply networks.

Attention



The necessary protective measures against electric shock and other country-specific requirements must be considered and implemented before commissioning the charging station.



This product is designed for type A environments (interfering emissions), the immunity is equivalent to type A environments.



Depending on the mains voltage and the configuration of the HYC50, a protective earth current of up to 30 mA may flow. This must be taken into account when designing the protective earthing and protective measures.



This product can cause a DC current > 6 mA in the protective conductor. Where a residual current-operated protective device (RCD*) is used for protection against electrical shock, only an RCD of Type B or B+ is allowed on the supply side of this product. An $I_{\Delta N} = 100 \text{ mA}$ is recommended.

*In certain cases, e.g. installations in TT supply networks, the installation of a residual current device (RCD) is mandatory.



Any optionally connectable external signals may only be designed and connected as SELV signals.

After the HYC50 has been mechanically installed (see Chapter 4.1), the mains cables can be screwed to the isolator at the input.

Recommended conductor cross-sections:

Model	Power supply connections	Conductor cross section
HYC50	L1, L2, L3	1 x 25...50 mm ²
	PE (PEN)	1 x 25...50 mm ²

Table 9: Recommended cross-sections

Attention



The outer diameter of the connection cable must be in the range of 24 mm and 35 mm to ensure tightness at the cable entry seal.

Diameters larger than 35 mm cannot be mechanically accommodated.

4.2.3. Surge protection

The HYC50 is equipped with a type 1+2+3 surge protection (3+1 circuit) as standard so that it is also suitable for a TT grid. This means that the charging station can be installed in LPZ zone 0_A. The connection to a suitable earthing system, considering country-specific legal requirements, must be ensured.

4.3. Checks before switching on for the first time

Operation of the HYC50 must be carried out in compliance with the test and inspection instructions described below. All instructions listed below are considered binding and must be carried out by the charging station operator before initial operation.

After transport and installation, check the following points:

Testing	Execution
Mechanical visual inspection	Mechanically sound condition of the installed unit.
Protection class	After connecting the cable connections, protection class IP55 must be ensured
Screw connections	Partial or complete check of tightening torques on terminals and mechanical screw connections.
Earthing system	Check the earthing, taking into account the site-specific conditions and the applicable standards.
Lightning protection for the supply cable	Check whether lightning protection is installed for the supply line in accordance with IEC 61439-2/-7 or country-specific requirements.
Selectivity	To ensure selectivity, make sure that series-connected overcurrent or residual current protective devices only trip the device that is located directly upstream of the fault location. The test shall be carried out on the basis of IEC 61439-2.
Operating conditions	Consideration of the operating conditions at the installation site (e.g. mechanical, chemical, corrosive stress) according to IEC 61439-2 /-7 as well as deviating country-specific standards.
Contact protection	Check whether the contact protection has been correctly mounted after the electrical installation has been completed.
Residual current device	Check whether a residual current circuit breaker outside the charging station is required for operation and, if so, whether it has been installed. The test must be carried out considering the site-specific conditions and the applicable standards.
Short-circuit resistance	Rated current and short-circuit strength of the main busbar system considering the upstream protective device according to IEC 61439-2 /-7
Automatic power supply cut-off	The requirements of IEC 60364-4-41, section 411 must be fulfilled.
Low-voltage electrical installations	The requirements of IEC 60364-7-722 must be fulfilled.

Table 10: Checks before commissioning

4.4. Commissioning

For the safe operation of the charging station, correct commissioning and the inspection of the safety devices are required.

All the points listed below are considered mandatory and must be carried out by the operator of the hypercharger (or the contracted installation company) **at the moment of commissioning**. Depending on the individual operating conditions of the hypercharger, further checks may be required. Therefore, the following list should not be considered as complete.

Commissioning checks	Description
External visual inspection	<ul style="list-style-type: none"> Housing condition IP degree of protection (IP55) Stability Accessibility
Inspection of charging cable and plug device	Inspect all cable components (cable sleeve, cable, cable connector, mating face, pins) to ensure they are not damaged (e.g. cable sheath is intact, no crimping or cracking, pins are not damaged, etc.)
Inspect threaded connection for input power cable	Visual inspection to ensure that the threaded connections for the input power cable are tight
Inspection of screws	<ul style="list-style-type: none"> Visual spot check of internal screw connections Spot check of tightening torques
Cleanliness inspection	Check level of cleanliness within the charging station
Condensation inspection	Check for the presence of condensation traces within the charging station
Inspection of filter mats	Inspection for sound condition
Check of protective measures	<ul style="list-style-type: none"> Visual inspection of the earthing system Test for earthing resistance Test for continuity of equipotential bonding connections
Supply line inspections	<ul style="list-style-type: none"> Test of the insulation resistance at the main switch (line-side) Information about the existing protective device Inspection of the fuse protection
Inspection of insulation resistances at DC charging outlets	Test of the insulation resistance of the pins for every existing DC charging outlet
Inspection of RFID reader	Function test of RFID reader
Test connectivity SIM cards	<ul style="list-style-type: none"> Check the connection to the alpitronic backend Check the connection to the customer backend
Inspection of the display elements	<ul style="list-style-type: none"> Touch screen function test Function test of screen display and, if necessary, touch screen for the credit card terminal
Inspection of LED strips	Function test of LED strips on the front
Material testing / inspection of components pertaining to calibration law (if present, for details see calibration law annex)	<ul style="list-style-type: none"> Nameplate Wiring pertaining to calibration law Adhesive seal Remote display units pertaining to calibration law

Table 11: Inspections to be carried out upon commissioning

Attention



Observe all hazard warnings in chapter 1



In order to be able to benefit from the contractually stipulated warranty period, the corresponding commissioning protocol incl. photo documentation must be completed and sent to support@hypercharger.it.



The warranty claim may expire if installation & commissioning are not carried out properly.

Remark



The commissioning protocol is available on the document platform "hyperdoc".

5. Diagnosis and parameterization

After successful mechanical and electrical installation of the HYC50, the correct function of the device can be checked with a diagnostic and parameterization tool. The diagnostic web interface can be loaded via any browser with a standard IP address, see Table 12:

Default IP address	192.168.1.100
---------------------------	---------------

Table 12: Default IP address of the HYC50

More information about the user interface is given in the software part of the HYC50 operating and installation manual.

6. Operation of the HYC50

6.1. Starting the charging process

6.1.1. Authentication

To be able to start a loading process, you must first authenticate yourself.

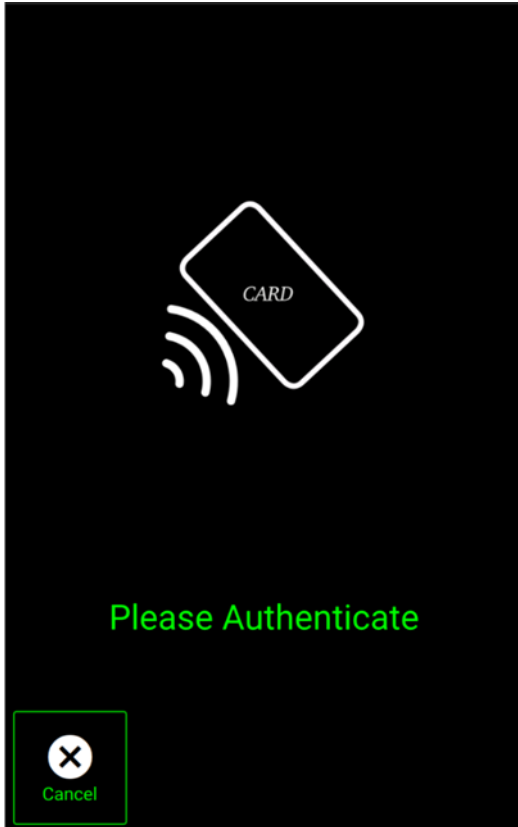


Figure 22: Authentication

Information



Detailed user guidance for the entire charging process is displayed directly on the charging station screen depending on the selected authentication medium and charging cable. An overview of the user guidance per authentication option can be found in Figure 24.

There are several ways to authenticate yourself at the charging station:

Directly at the charging station:

- **NFC¹ card:** Hold your user card against the RFID reader, which is located to the left of the screen ("contactless" symbol). If the charging station has a credit card terminal, the RFID reader is located to the left of the screen (see Figure 7).
- **Giro-e:** If the operator supports this option, you can authenticate yourself by holding your Giro-e card up to the RFID reader.
- **Credit card:** If a credit card terminal is available, you can authenticate via credit card by holding it up to the credit card reader below the screen.

Via the backend system:

- **Backend:** The backend system interacts with the connected charging station via the "Remote Start Transaction", which is regulated by the OCPP protocol. This can be used to start and stop charging processes, among other things.
- **App:** If provided by the operator, start the operator app that is connected to the charging station via the backend system and follow the instructions on your smart device.

Via the vehicle:

- **Auto charge:** If the operator offers this option, authentication can also take place directly via the vehicle in the form of "auto charge". In this case, the vehicle is identified via the (VID² /EVCCID³) as soon as the connection has been established via the charging cable.
- **Plug & Charge:** Insert the charging plug into the vehicle. As soon as the vehicle is connected, it automatically authenticates itself on behalf of the driver at the charging station (using EMAID⁴), among other things, by sending a digital certificate to the back end.

¹ NFC = "Near Field Communication"

² VID = "Vehicle Identification Device"

³ EVCCID = "Electric Vehicle Communication Controller Identifier"

⁴ EMAID = "E-Mobility Identifier Account"

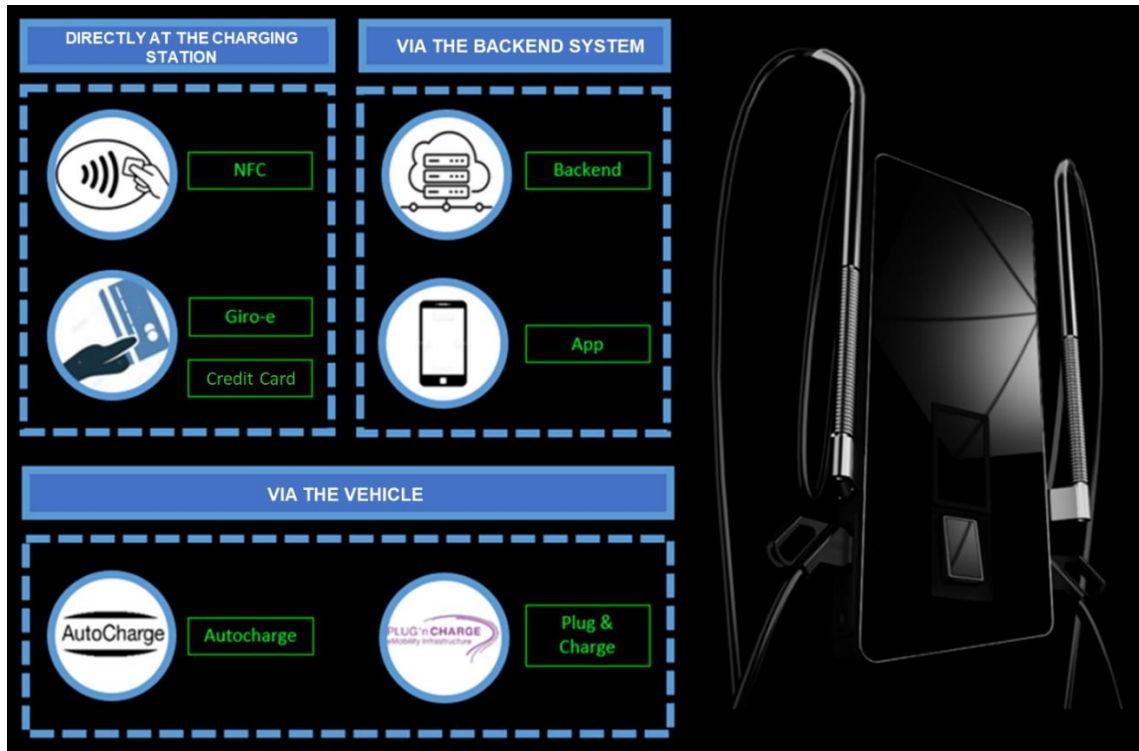


Figure 23: Overview of the authentication options

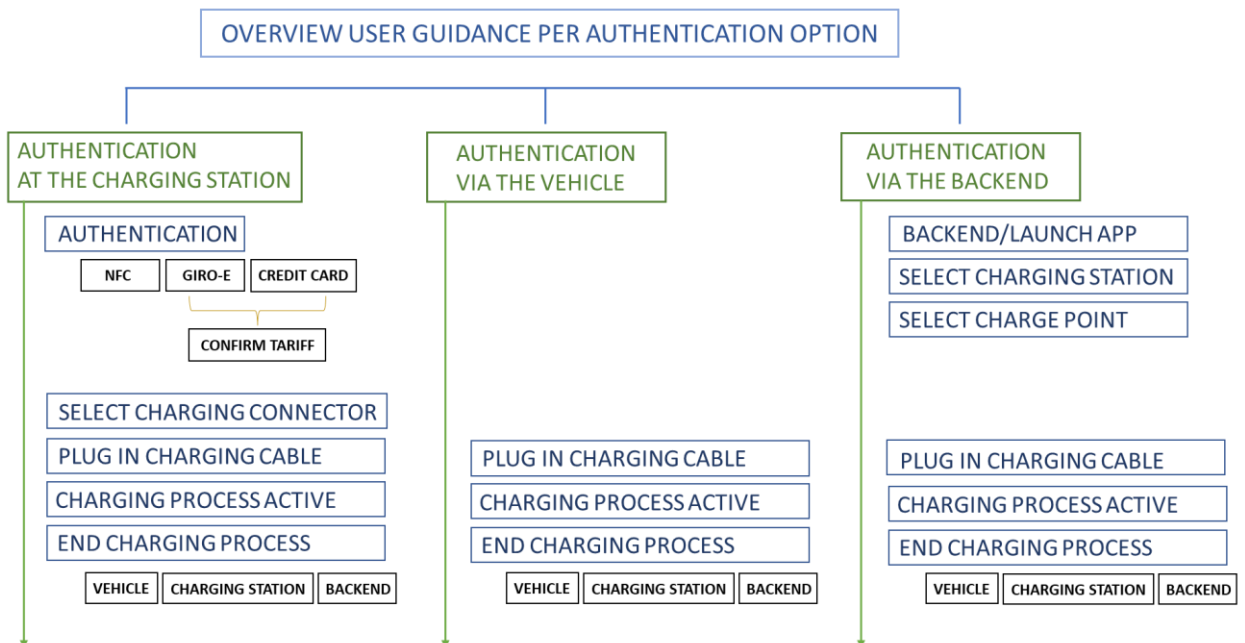


Figure 24: Overview user guidance per authentication option

The following display appears during the authentication process:

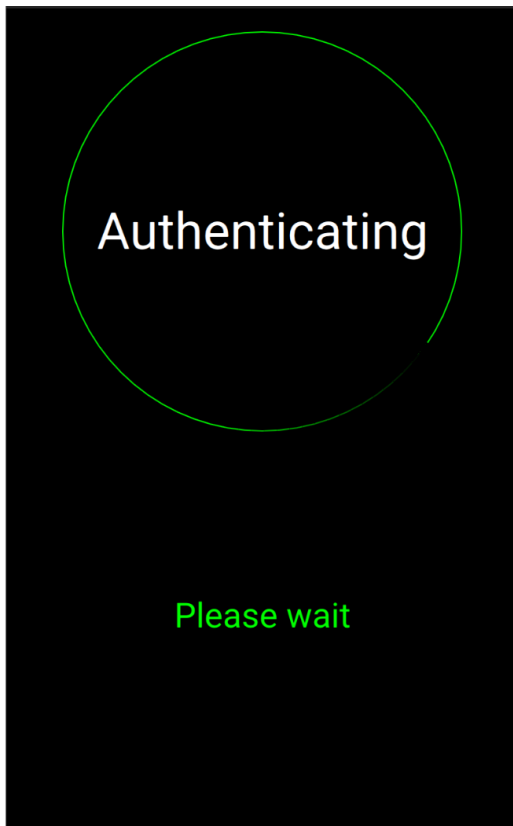


Figure 25: Authentication process

Information



If the charging station is running in kiosk mode, no authentication is required. In this case you can directly start a new session by pressing the button below the "New Session" text on the screen.

6.1.2. Charging plug selection

Now select the charging plug with which you want to charge your vehicle. Navigation is performed by touching the respective controls on the touchscreen.

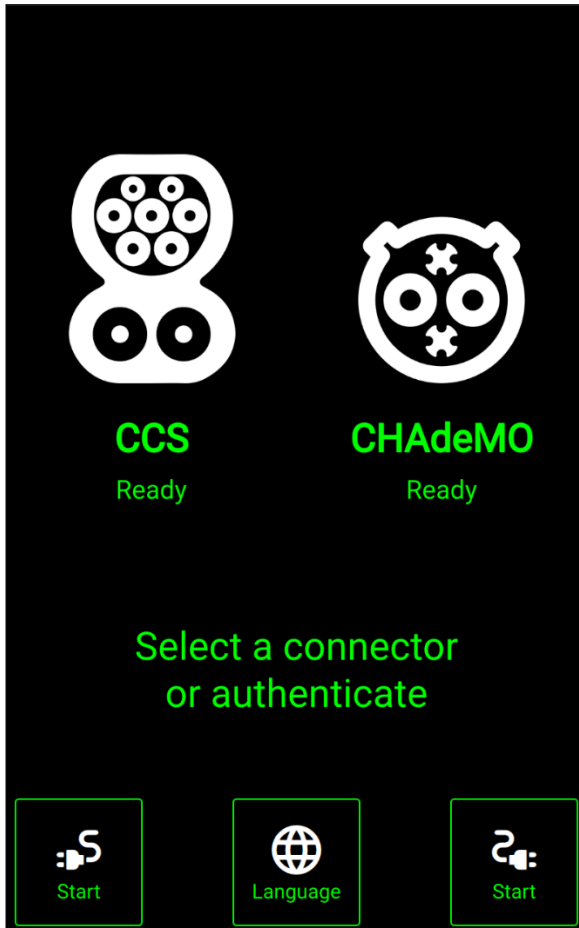


Figure 26: Charging plug selection

Information



Depending on the configuration of the charging station, other symbols may be displayed because other charging plugs are installed.



When the connectors are free, the corresponding LED strips light up green.



To access the language selection, press the screen at the very bottom in the middle.



Figure 27: Language selection

6.1.3. Plugging in the charging cable

After you have selected the type of charging cable, the display will prompt you to plug the corresponding charging cable into the designated socket on your vehicle.

Information



The corresponding LED strip flashes blue as soon as the charging cable can be plugged in. As soon as the charging process has started, it stops flashing and remains solid blue.

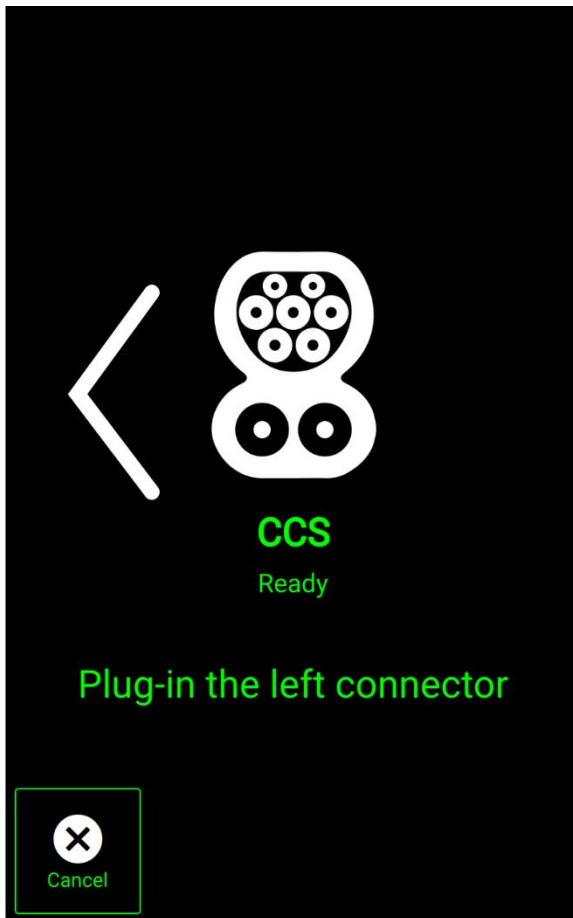


Figure 28: Plugging in the charging cable

Information



For CHAdeMO cables, make sure that they lock correctly.

While the charging station is connecting to your vehicle, the following display appears:

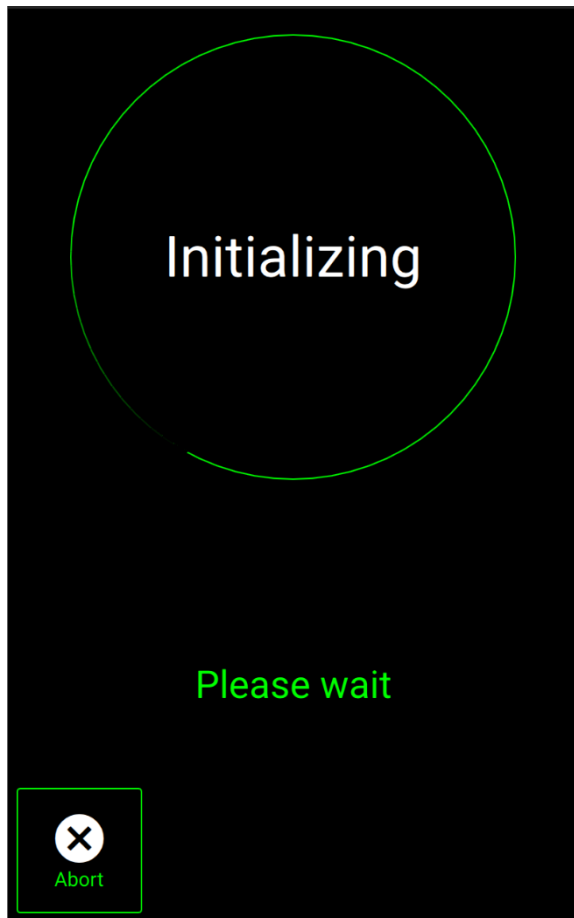


Figure 29: Initializing

6.2. During the charging process

6.2.1. Charging overview

Now an overview of the active loading process appears, which displays the following information:

- Current state of charge (in % and kW)
- Voltage (V)
- Charging current (A)
- Already charged energy (kWh)
- Charging time (hh:mm:ss)

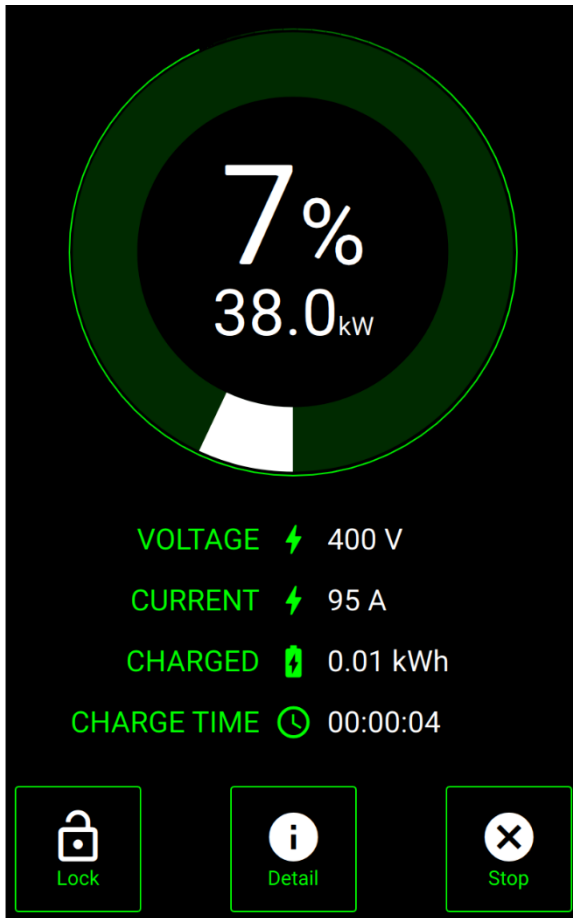


Figure 30: Overview of charging process

If you select the "Lock" menu item, the display is locked.

If you want to get additional information about the charging process, tap on the menu item "Details", an overview including charging curve will appear in the following.

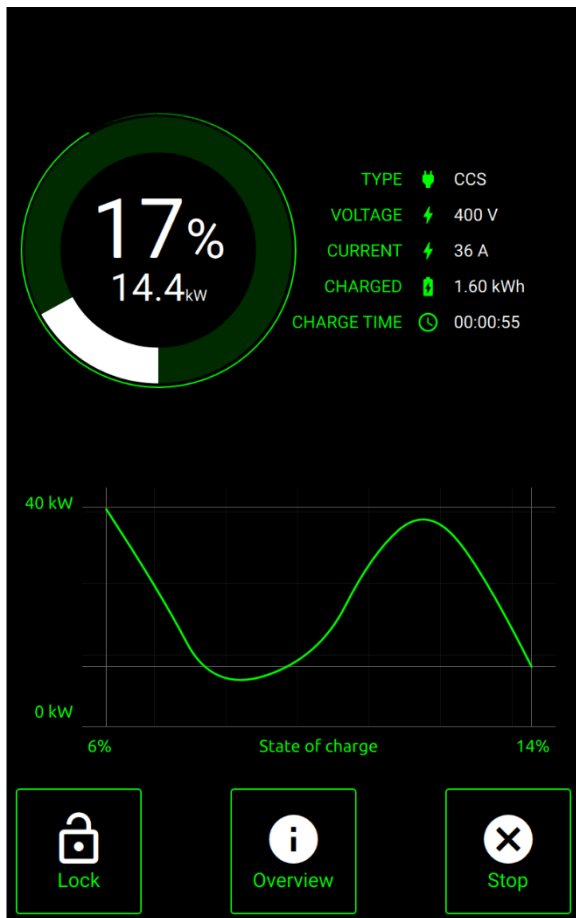


Figure 31: Detailed loading overview

Information



Note that the display information may vary from operator to operator. Certain charging station operators hide this information. In this case, the charging status can be checked in the vehicle.

It is possible to charge two vehicles at the same time. If a vehicle is already charging, you can select the free charging cable after you have successfully authenticated yourself.

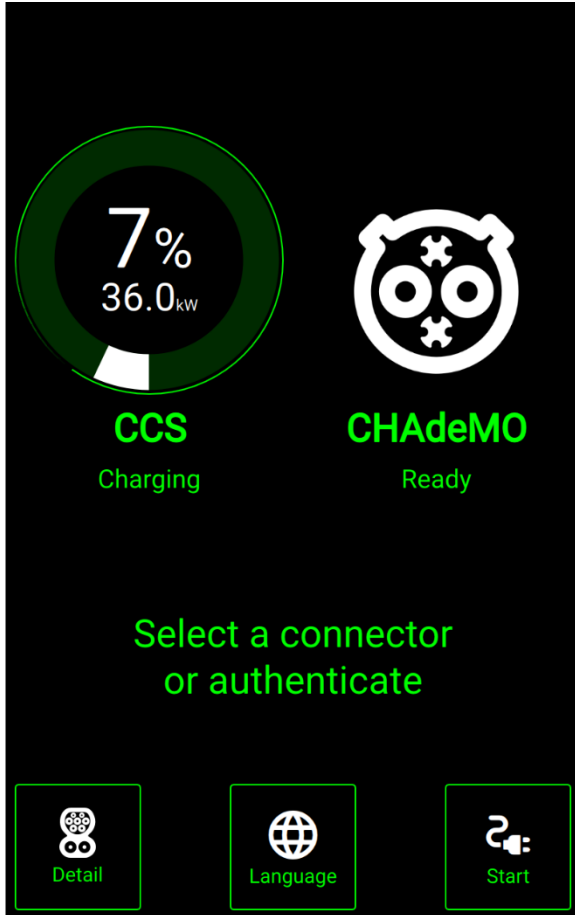


Figure 32: Load second vehicle

As soon as both vehicles are charging in parallel, the following overview appears:

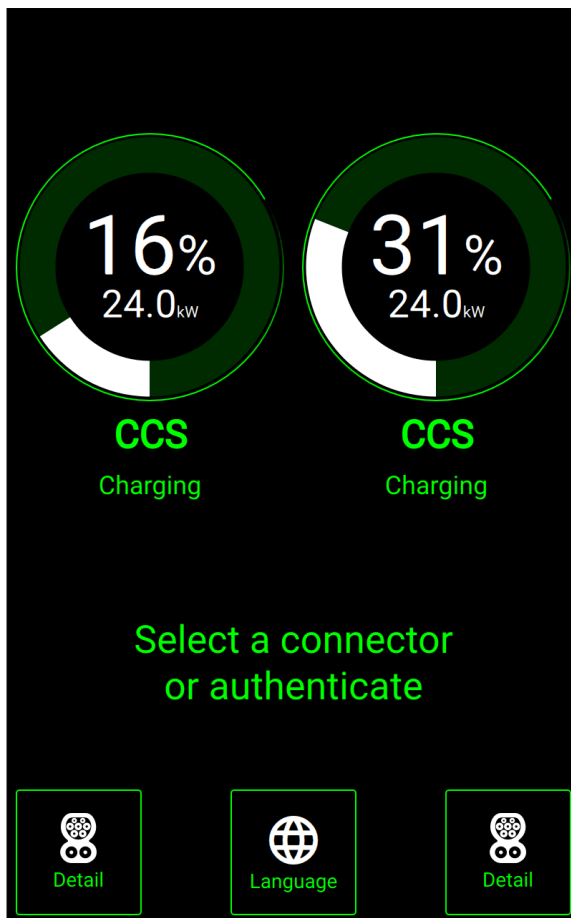


Figure 33: Charging overview with two active charging processes

To access the respective loading overview, click on the corresponding "Details" menu item.

6.3. Stop charging process

6.3.1. Wake screen

After a certain time, the screen saver activates. To return to the loading overview, tap the touchscreen.

6.3.2. Stop charging

In the lower section of the charging overview, you have the option of stopping the charging process at any time by pressing "Stop".

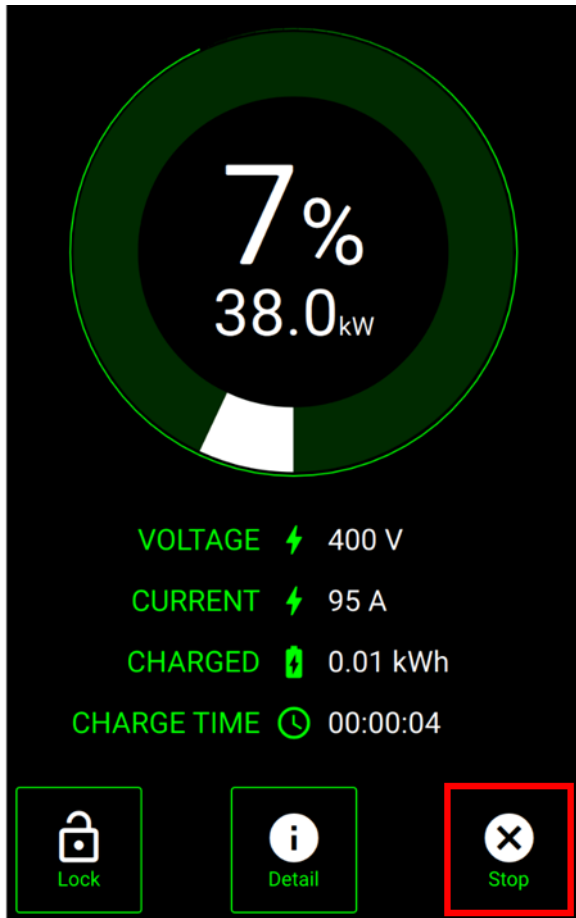


Figure 34: Stop charging

You must authenticate yourself again to cancel the charge.

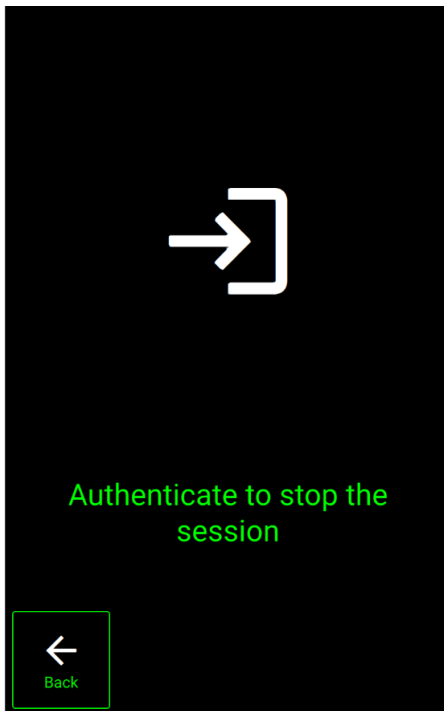


Figure 35: Authentication to stop charging process

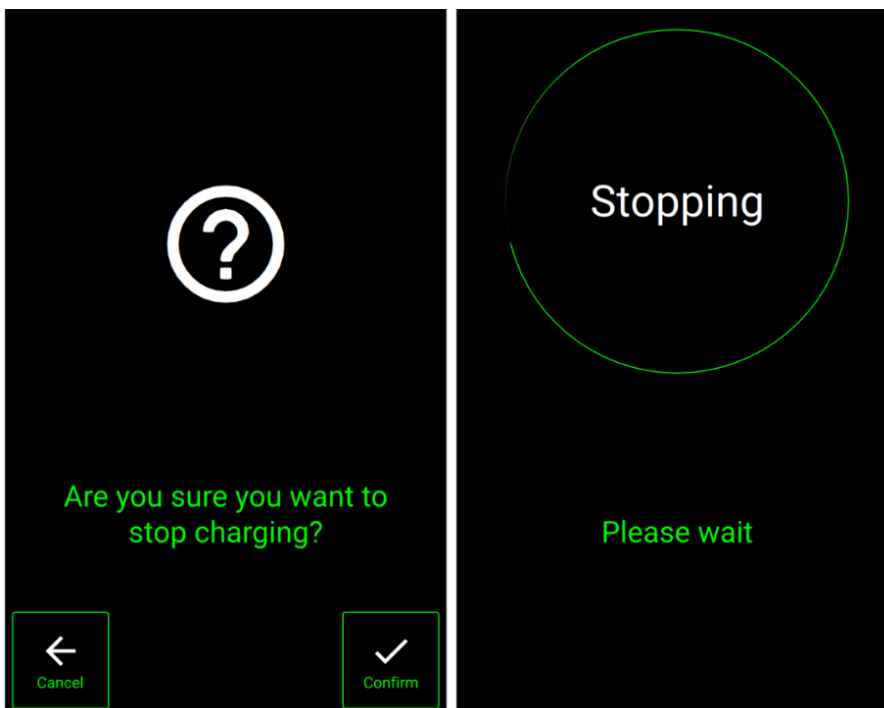


Figure 36: Process charging stop

Once you are authorized to stop charging, you will be prompted to unplug the charging cable from the vehicle. Plug it back in properly to the charging station's designated cable holder.

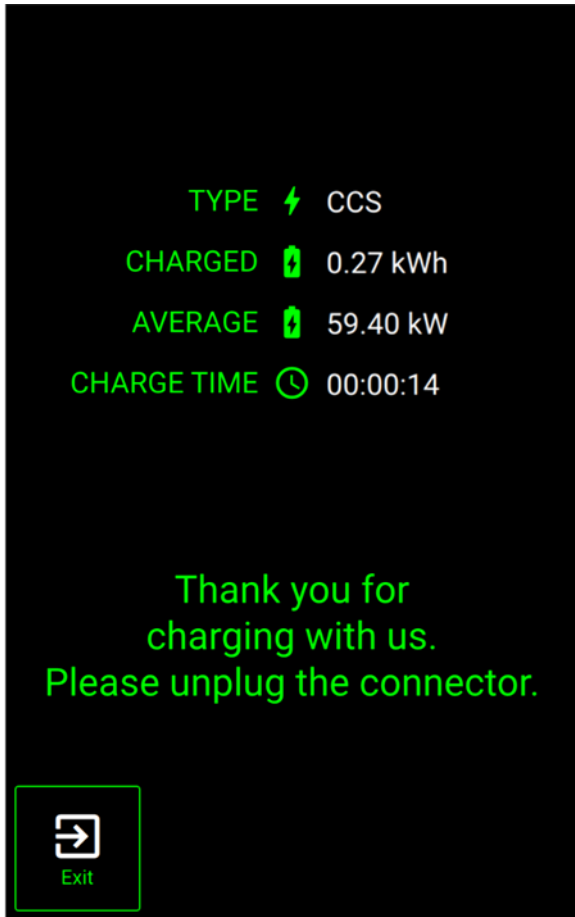


Figure 37: Unplug the charging connector

6.4 Procedure for error messages

6.4.1 Authentication failed

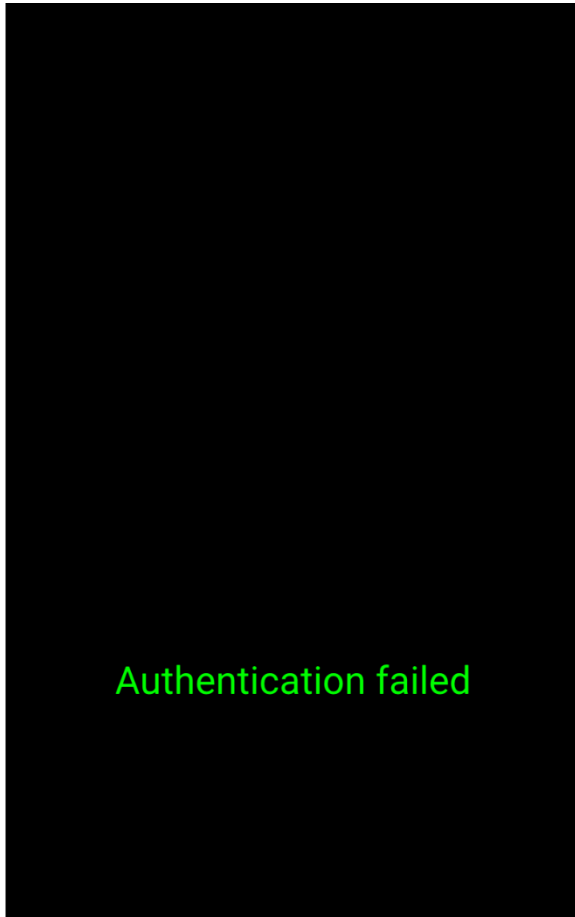


Figure 38: Authentication failed

If this error message appears, try the authentication process again.

6.4.2 Charging plug defective

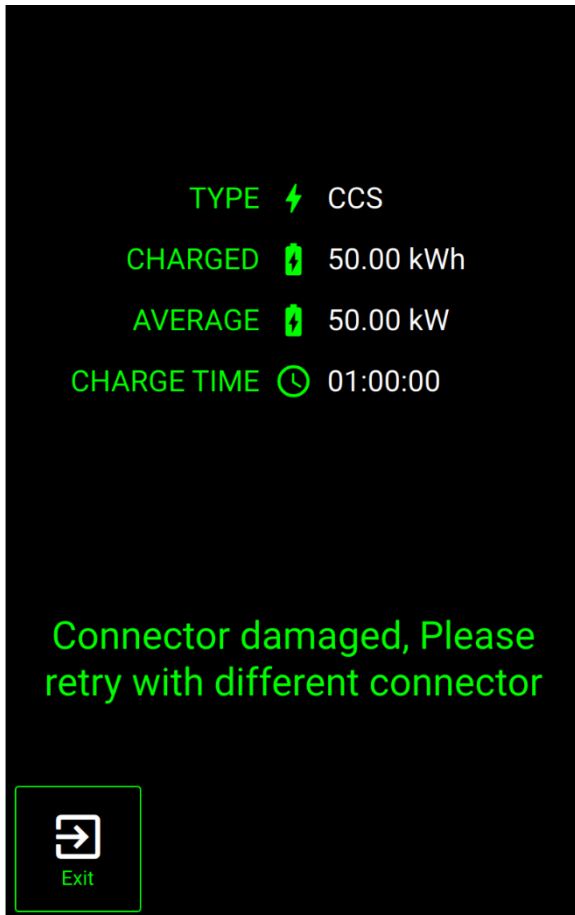


Figure 39: Charging plug defective

When this message appears, the operator has already been informed about the defect and will rectify the fault as soon as possible. In the meantime, switch to another charging plug if possible.

6.4.3 Error during communication setup

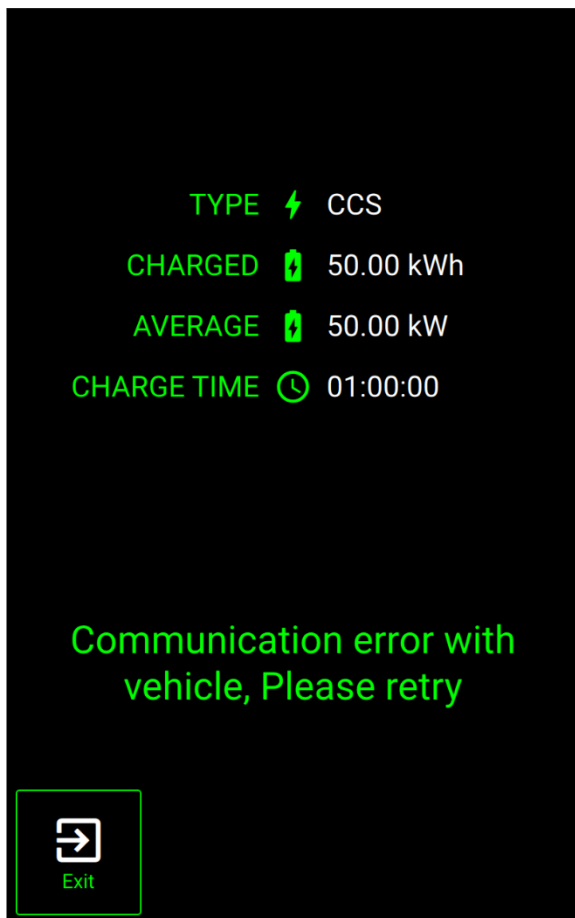


Figure 40: Error during communication setup

When this error message appears, the vehicle was unable to connect to the charging station. Try to start a charging process again. If this does not work, try driving the vehicle a few meters forwards and backwards to reset the charging technology and wake it up from a possible standby.

6.4.4 Connector locking failed

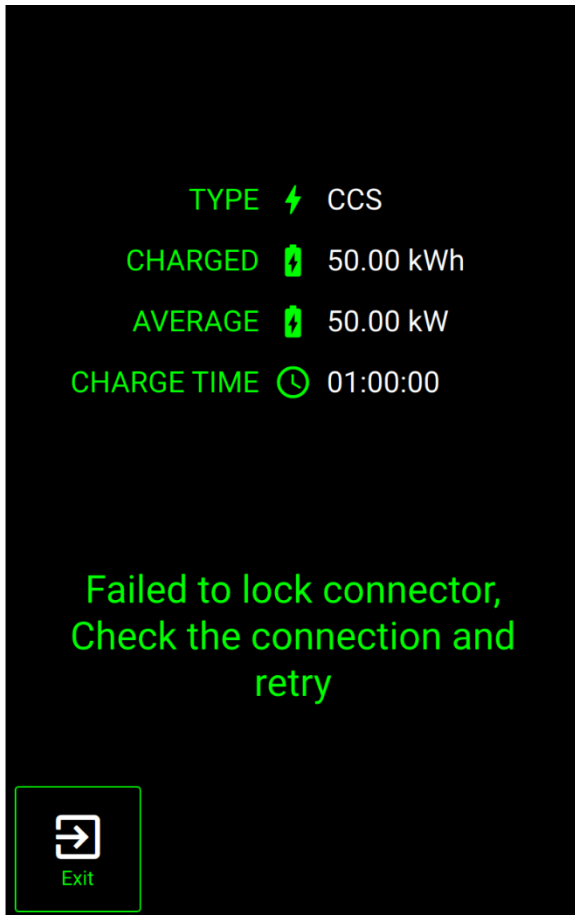


Figure 41: Connector locking failed

When this message appears, the connector could not be locked correctly. In this case, the plug could not be locked correctly. Hold the cable to the socket with your hand until you hear the locking mechanism of the car and the charging process is started.

6.4.5 The vehicle signals an error

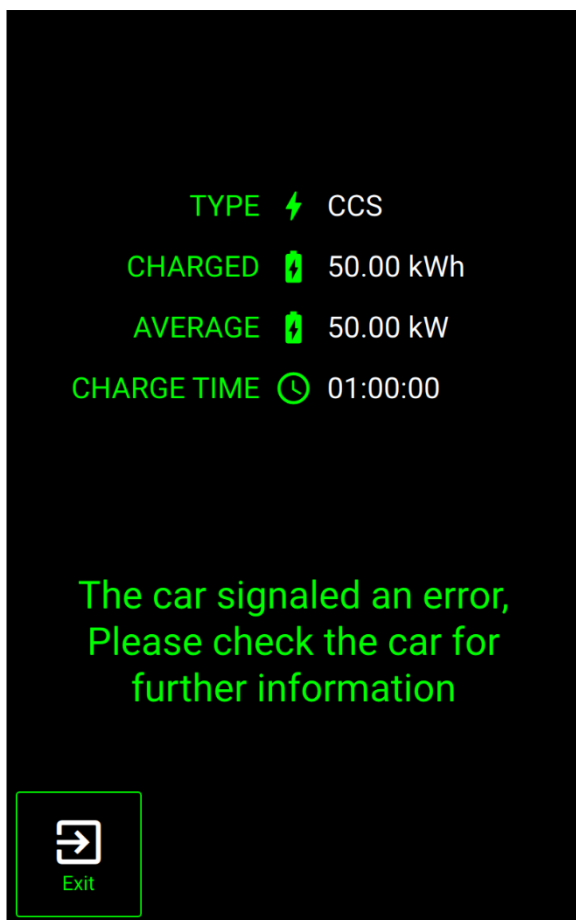


Figure 42: Vehicle error

If this message appears, the car signals a charging error. Try to start a charging process again. If this does not work, try driving the car a few meters forwards and backwards to wake it up from a possible standby.

Information



If you have any further questions or problems, please contact the charge point operator!

7. Fault description and correction

Attention



Observe all hazard warnings in chapter 1

Failure description	Possible cause	Troubleshooting
The display remains black	No power supply	Switch on the circuit breaker
The power level cannot be switched on	The circuit breaker (-QB1) is switched off	Switch on the circuit breaker
No communication to the backend	No connection via Ethernet or mobile network	Check the connection of the Ethernet network (-XF2). Start the charging station in diagnostic mode and use the diagnostic tool for further fault localisation.
Charging not possible	Error in the configuration of the charging station	Start the charging station in diagnostic mode and use the diagnostic tool for further fault localisation.

Table 13: Fault description and correction

8. Maintenance

For the safe operation of the charging station, regular maintenance or inspection of the safety equipment is required.

All the points listed below are considered mandatory and must be carried out by the operator of the hypercharger **on an annual basis**. Depending on the individual operating conditions of the hypercharger, further checks may be required. Therefore, the following list should not be considered as complete.

Maintenance work	Description
External visual inspection	<ul style="list-style-type: none"> Housing condition IP degree of protection (IP55) Stability Accessibility Credit card terminal (if available)
Inspection of charging cable and plug device	Inspect all cable components (cable sleeve, cable, cable connector, mating face, pins) to ensure they are not damaged (e.g. cable sheath is intact, no crimping or cracking, pins are not damaged, etc.)
Inspect threaded connection for input power cable	Visual inspection to ensure that the threaded connections for the input power cable are tight
Inspection of screws	<ul style="list-style-type: none"> Visual spot check of internal screw connections Spot check of tightening torques
Cleanliness inspection	Check level of cleanliness within the charging station
Condensation inspection	Check for the presence of condensation traces within the charging station
Inspection and replacement of filter mats if necessary	Inspection for sound condition and contamination
Check of protective measures	<ul style="list-style-type: none"> Visual inspection of the earthing system Test for earthing resistance Test for continuity of equipotential bonding connections
Supply line inspections (only if there is no IBN protocol in place)	<ul style="list-style-type: none"> Test of the insulation resistance at the main switch (line-side) Information about the existing protective device Check that the unaffected short circuit current I_{CP} at the charging station is limited to 25 kA (rms)
Inspection of insulation resistances at DC charging outlets	Test of the insulation resistance of the pins for every existing DC charging outlet
Inspection of overvoltage protection	Inspection of the optical defect display of the overvoltage protection
Inspection of the main switch	Functional test of the main switch QB1
Inspection of RFID reader	Function test of RFID reader
Test connectivity SIM cards	<ul style="list-style-type: none"> Check the connection to the alpitronic backend Check the connection to the customer backend
Inspection of display elements	<ul style="list-style-type: none"> Function test of screen display + touch screen Function test of screen display and, if necessary, touch screen for the credit card terminal (where available)
Inspection of LED strips	Function test of LED strips on the front

Material testing / inspection of components pertaining to calibration law (if present, for details see calibration law annex)	<ul style="list-style-type: none">• Nameplate• Wiring pertaining to calibration law• Adhesive seal• Remote display units pertaining to calibration law• Recalibration of measuring instruments that conform to calibration law• If required, functional tests including accuracy tests
---	---

Table 14: Maintenance to be performed

Attention



Observe all hazard warnings in chapter 1



In order to be able to benefit from the contractually stipulated warranty period, the corresponding maintenance protocol incl. photo documentation must be completed and sent to support@hypercharger.it.



The warranty claim may expire if the annual maintenance is not carried out properly.

Remark



The maintenance protocol is available on the document platform "hyperdoc".

9. Repair and service

The hypercharger's modular design makes it easy to repair defective components.

Attention



Please note that any repair work on the hypercharger can **exclusively** be carried out by trained personnel and in compliance with the required legal and safety measures!



Please consult with hypercharger support before any repairs are made. support@hypercharger.it or +39 0471 1961 333



Observe all hazard warnings in chapter 1



When the door is opened as far as it will go, make sure that no major forces act on the mechanical stop in order to avoid the damaging (bending) of the door hinges. In such a case, it must be checked whether the tightness of the door is still guaranteed.

Information



More information on hypercharger trainings can be requested at training@hypercharger.it.



For spare parts orders you can contact sales@hypercharger.it.



Repair instructions can be requested from the hypercharger support.

The hypercharger support team is available from Monday to Friday from 08:00-12:00 and from 13:00-17:00. You can call +39 0471 1961 333 or write an email to support@hypercharger.it.

10. Disposal

Electrical and electronic equipment contains materials, components and substances that may be hazardous and present a risk to human health and the environment. Hence, the hypercharger and its components shall not be discarded together with household waste, but must be collected separately.

The hypercharger is subject to the WEEE Directive 2012/19/EU (Waste of Electrical and Electronic Equipment), which is implemented differently by EU countries. Depending on the country, distributors and/or manufacturers must register and report the exported quantities of electrical and electronic equipment and pay a fee if necessary.

Cardboard and plastic packaging must be disposed of separately. Please contact your local municipality for suitable collection points.

Information



For more information, please contact the hypercharger support or check directly with a dedicated WEEE advice center.

11. Technical data

General technical data and operating conditions:

Parameter	Nominal value
Protection class	IP55
Mounting location	Indoor and Outdoor
Humidity range for operation or storage	0...95 % rel. (non-misting)
Humidity range for operation	0...95 % rel.
Pollution degree	4
Storage temperature range	-40 °C ... +55 °C
Operating temperature range	-30 °C ... +55 °C (+40 to +55 °C with derating)
Mechanical impact resistance (IEC62262)	IK10
Mounting type	Wallmount or Stand
Accessibility	Without restrictions
Installation height	up to a maximum of 4,000 m.a.s.l.
Protection class	Class I (protective grounding)
Supported charging modes	Mode 4
Max. Air flow rate HYC50	420 m ³ /h

Table 15: Technical data

Type	Width [mm]	Hight [mm]	Depth [mm]	Weight [kg]
HYC50	520	1300	220	95 ... 145 kg

Table 16: Mechanical Data

Electrical connection data HYC50

Parameter	Nominal value
Operating voltage U_r	3x 220/230/277 (380/400/480) Vac +PE (+10%...-15%), see type plate
Mains type	TN-C, TN-S, TN-C-S, TT
Frequency	50/60 Hz ($\pm 5\%$)
Rated current I_r	90 A
Efficiency	95 % @ P_r (worst case)
Max. Backup-fuse / circuit breaker to be used (mandatory)	fuse 125 A gG (gL) circuit breaker 125 A (Type B or C)
Max. connection cross-section	50 mm ² (see note in Table 7)
Permissible outer diameter of the supply line	24...35 mm
Max. rated peak withstand current I_{cp}	25 kA (rms)
Rated short-time withstand current I_{cw}	1,4 kA (rms) @1s
Contribution to the short-circuit current	I_r
Oversvoltage category	OVC III
Integrated surge protection (SPD)	Type 1+2+3

Table 17: Electrical connection data HYC50

tomas.daukas@elintacharge.com
22.08.2023 06:06:06

Standby power consumption

Type	Performance level	Display brightness	Power [W]
HYC50	STANDBY	7/10	24.7
		10/10	27.0

Table 18: Idle power dissipation at 400V according to the display brightness

Wireless connections

The radio modem of the HYC50 supports the following frequency bands:

Frequency band	Transmission level (max. rated power)
WCDMA B1, B8 (UMTS900, UMTS2100)	24 dBm
LTE FDD B1, B3, B7, B8, B20, B28	23 dBm
GSM 900	33 dBm
GSM 1800	30 dBm

Table 19: Frequency bands and transmission levels of the HYC50

Attention



Observe all hazard warnings in chapter 1



Due to the higher leakage current, a minimum protective conductor cross-section of $\geq 10 \text{ mm}^2$ CU or $\geq 16 \text{ mm}^2$ AL is required.



Dangerous residual voltages

After disconnecting the HYC50 from the power supply, the discharge time for hazardous voltages of 5 min must be observed before removing the touch guard in the device.



This product can cause a DC fault current $> 6 \text{ mA}$ in the protective conductor. Where a residual current-operated protective device (RCD*) is used for protection against electrical shock, only an RCD of Type B or B+ is allowed on the supply side of this product. An $I_{\Delta N} = 100 \text{ mA}$ is recommended.

*In certain cases, e.g. installations in TT supply networks, the installation of a residual current device (RCD) is mandatory.



During operation, increased temperatures are to be expected at the air outlets

12. Declaration of Conformity



**Niederspannungs-
Schaltgerätekombinationen nach IEC
EN 61439-7**

CE KONFORMITÄTSEKTLÄRUNG
DICHIARAZIONE DI CONFORMITÀ CE
CE DECLARATION OF CONFORMITY

**Quadri elettrici per bassa tensione
secondo IEC EN 61439-7**



**Low voltage switchgears and
controlgear assemblies in compliance
with the Standard IEC EN 61439-7**

Hersteller: Costruttore: Manufacturer:	alpitronic GmbH – srl Via di Mezzo ai Piani 33 I-39100 Bolzano	Tel. +39 0471 1961 000 Fax: +39 0471 1961 451 info@alpitronic.it
Schaltgerätekombination / Ladestation: Quadro elettrico / colonnina: Switchgear assembly / charging station:	Ladestation für DC-Laden Colonnina DC Charger EV Charging Station	
Typ: Tipo: Type:	HYPERCHARGER	
Model: Modello: Model:	HYC_50	
Jahr der Anbringung der Kennzeichnung: Anno di apposizione della marcatura CE: Year of affixing CE marking:	2022	

Die Firma **alpitronic GmbH** mit Sitz in I-39100 Bozen, Hersteller der oben beschriebenen Schaltgerätekombination (Ladesäule) erklärt aus eigener Verantwortung, dass die Schaltgerätekombination Konformität mit den Bestimmungen der folgenden gemeinschaftlichen Richtlinien aufweist, wie auch mit der entsprechenden nationalen Gesetzgebung

La ditta **alpitronic srl** con sede a I-39100 Bolzano, costruttrice del quadro elettrico (colonnina) sopra descritto, dichiara sotto la propria responsabilità che il quadro elettrico risulta conforme con quanto previsto dalle seguenti direttive comunitarie, nonché alla relativa legislazione nazionale di recepimento

The company **alpitronic srl** located in I-39100 Bolzano, manufacturer of the above-mentioned switchgear assembly (charging station), declares under its own responsibility that the switchgear assembly conforms to what is foreseen by the following European Community directives, as well as to the relative national implementation legislation

Bezug	Riferimento	Reference
Die Richtlinie 2014/35/EU Niederspannungs-Richtlinie	La direttiva 2014/35/EU Direttiva bassa tensione	Directive 2014/35/EU Low Voltage Directive
Die Richtlinie 2014/30/EU EMV-Richtlinie	La direttiva 2014/30/EU Direttiva EMC	Directive 2014/30/EU EMC-Directive
Die Funkanlagenrichtlinie RED 2014/53/EU	Radio Equipment Directive RED 2014/53/EU	Radio Equipment Directive RED 2014/53/EU
und dass die folgende harmonisierte Norm angewendet wurde	e che è stata applicata la seguente norma armonizzata	and that the following harmonized Standard has been applied
Norm Code	Codice norma	Standard code
IEC EN 61439-1:2021 Niederspannungs-Schaltgerätekombinationen (NS-SK) Teil 1: Allgemeine Festlegungen	IEC EN 61439-1:2021 Apparecchiature assiemate di protezione e manovra per bassa tensione (quadri BT) Parte 1: Regole Generali	IEC EN 61439-1:2021 Low voltage switchgear and control gear assemblies Part 1: General Rules
IEC TS 61439-7:2021 Niederspannungs-Schaltgerätekombinationen Teil 7: Schaltgerätekombinationen für bestimmte Anwendung wie Marinas, Campingplätze, Marktplätze, Ladestationen für Elektrofahrzeuge	IEC TS 61439-7:2021 Apparecchiature assiemate di protezione e manovra per bassa tensione Parte 7: Applicazioni speciali per porti di marina, campeggi, piazze di mercato, colonnine per ricarica di veicoli stradali elettrici	IEC TS 61439-7:2021 Low voltage switchgear and control gear assemblies Part 7: Assemblies for specific applications such as marinas, camping sites, market squares, electrical vehicles charging station
IEC EN 61851-1:2019	IEC EN 61851-1:2019	IEC EN 61851-1:2019

Datum:
Data: 05.06.2023
Date:

Unterschrift:
Firma:
Signature: 

tomas.daukas@elintacharge.com
22.08.2023 06:06:06



**Niederspannungs-
Schaltgerätekombinationen nach IEC
EN 61439-7**

**CE KONFORMITÄTSERKLÄRUNG
DICHIARAZIONE DI CONFORMITÀ CE
CE DECLARATION OF CONFORMITY**



**Low voltage switchgears and
controlgear assemblies in compliance
with the Standard IEC EN 61439-7**

Elektrische Ausrüstung von Elektrofahrzeugen –
Konduktive Ladesysteme für Elektrofahrzeuge
Teil 1: Allgemeine Anforderungen

Equipaggiamento elettrico per veicoli elettrici –
Sistemi conduttivi di ricarica
Parte 1: Requisiti Generali

Electric vehicle conducting charging system
Part 1: General requirements

IEC EN 61851-21-2:2018
Konduktive Ladesysteme für Elektrofahrzeuge
Teil 21-2: EMV-Anforderungen an externe
Ladesysteme für Elektrofahrzeuge

IEC EN 61851-21-2:2018
Sistemi conduttivi di ricarica per veicoli elettrici
Parte 21-2: Requisiti EMV per sistemi esterni di
ricarica per veicoli elettrici

IEC EN 61851-21-2:2018
Electric vehicle conductive charging system
Part 21-2: EMC requirements for OFF board
electric vehicle charging systems

IEC EN 61851-23:2018
Konduktive Ladesysteme für Elektrofahrzeuge
Teil 23: Gleichstromladestationen für
Elektrofahrzeuge

IEC EN 61851-23:2018
Sistemi conduttivi di ricarica per veicoli elettrici
Parte 23: Sistemi di ricarica in DC per veicoli
elettrici

IEC EN 61851-23:2018
Electric vehicle conductive charging system
Part 23: DC electric vehicle charging station

IEC EN 61851-24:2014
Konduktive Ladesysteme für Elektrofahrzeuge
Teil 24: Digitale Kommunikation zwischen einer
Gleichstromladestation für Elektrofahrzeuge
und dem Elektrofahrzeug zur Steuerung des
Gleichstromladevorgangs

IEC EN 61851-24:2014
Sistemi conduttivi di ricarica per veicoli stradali
elettrici
Parte 24: Comunicazione digitale tra la
colonnina d.c. charge e il veicolo elettrico per il
controllo della carica in d.c.

IEC EN 61851-24:2014
Electric vehicle conductive charging system
Part 24: Digital communication between a DC
EV charging station and an electric vehicle for
control of DC charging

EN 61000-6-4:2007/A1:2011
IEC 61000-6-2:2005
IEC 61851-21-2:2018 (class A)
EN 301 489-1 V2.2.3 (2019-11)
EN 301 489-3 V2.1.1 (2019-03)
EN 301 489-17 V3.2.4 (2020-09)
EN 301 489-52 V1.1.0 (2016-11)

EN 61000-6-4:2007/A1:2011
IEC 61000-6-2:2005
IEC 61851-21-2:2018 (class A)
EN 301 489-1 V2.2.3 (2019-11)
EN 301 489-3 V2.1.1 (2019-03)
EN 301 489-17 V3.2.4 (2020-09)
EN 301 489-52 V1.1.0 (2016-11)

EN 61000-6-4:2007/A1:2011
IEC 61000-6-2:2005
IEC 61851-21-2:2018 (class A)
EN 301 489-1 V2.2.3 (2019-11)
EN 301 489-3 V2.1.1 (2019-03)
EN 301 489-17 V3.2.4 (2020-09)
EN 301 489-52 V1.1.0 (2016-11)

IEC 60364-4-41:2005
Errichten von Niederspannungsanlagen – Teil
4-41: Schutzmaßnahmen; Schutz gegen
elektrischen Schlag

IEC 60364-4-41:2005
Installazioni elettriche a bassa tensione – Parte
4-41: Protezione per la sicurezza - Protezione
contro le scosse elettriche

IEC 60364-4-41:2005
Low voltage electrical installations – Part 4-41:
Protection for safety - Protection against
electric shock

IEC 60364-4-43:2017
Errichten von Niederspannungsanlagen – Teil
4-43: Schutzmaßnahmen - Schutz bei
Überstrom

IEC 60364-4-43:2017
Installazioni elettriche a bassa tensione – Parte
4-43: Protezione per la sicurezza - Protezione
contro le sovracorrenti

IEC 60364-4-43:2017
Low-voltage electrical installations – Part 4-43:
Protection for safety - Protection against
overcurrent

HD 60364-7-722:2016
Errichtung von Niederspannungsanlagen – Teil
7-722: Anforderungen für Betriebsstätten,
Räume und Anlagen besonderer Art –
Stromversorgung für Elektrofahrzeuge

HD 60364-7-722:2016
Installazioni elettriche a bassa tensione – Parte
7-722: Requisiti per installazioni o ubicazioni
speciali - Forniture per veicoli elettrici

HD 60364-7-722:2016
Low-voltage electrical installations – Part 7-
722: Requirements for special installations or
locations – Supplies for electric vehicles

IEC 62311:2019
Bewertung von elektrischen und
elektronischen Einrichtungen in Bezug auf
Begrenzungen der Exposition von Personen in
elektromagnetischen Feldern (0 Hz bis
300 GHz)

IEC 62311:2019
Valutazione degli apparecchi elettronici ed
elettrici in relazione ai limiti di base per
l'esposizione umana ai campi elettromagnetici
(0 Hz - 300 GHz)

IEC 62311:2019
Assessment of electronic and electrical
equipment related to human exposure
restrictions for electromagnetic fields (0 Hz –
300 GHz)

Der Hersteller erklärt unter der eigenen
Verantwortung, dass die oben beschriebene
Schaltgerätekombination (Ladesäule) fach-
gerecht und entsprechend aller Spezifikationen
die in der Norm IEC EN 61439 und IEC EN 61851
vorgesehen sind, realisiert worden ist.

La ditta costruttrice dichiara sotto la propria
responsabilità, che il quadro elettrico
(colonnina) sopra descritto è stato realizzato a
regola d'arte e conformemente a tutte le
specifiche previste dalla Norma IEC EN 61439 e
IEC EN 61851.

The manufacturer declares under its own
responsibility, that the above-mentioned
switchgear assembly (charging system) has
been constructed according to the state of the
art and in compliance with all the specifications
provided by the Standard IEC 61439 and IEC EN
61851.

Datum:
Data: 05.06.2023
Date:

Unterschrift:
Firma:
Signature:

Managing Director

tomas.daukas@elintacharge.com
22.08.2023 06:06:06



**Niederspannungs-
Schaltgerätekombinationen nach IEC
EN 61439-7**

CE KONFORMITÄTSERKLÄRUNG
DICHIARAZIONE DI CONFORMITÀ CE
CE DECLARATION OF CONFORMITY

**Quadri elettrici per bassa tensione
secondo IEC EN 61439-7**



**Low voltage switchgears and
controlgear assemblies in compliance
with the Standard IEC EN 61439-7**

Er erklärt außerdem, CE-zertifizierte Komponenten verwendet zu haben, die Auswahlkriterien und die Montageanleitungen beachtet zu haben, die in den entsprechenden Katalogen und Datenblättern angegeben sind, und während der Montage oder durch Umbau die Leistungen des verwendeten Materials, die in den schon genannten Katalogen erklärt werden, auf keinerlei Weise gefährdet zu haben.

Diese Leistungen und die ausgeführten Nachweise gestatten es daher, die Konformität der genannten Schaltgerätekombination mit den folgenden Anforderungen der Norm zu erklären:

Bauanforderungen:

- Festigkeit von Werkstoffen und Teilen der Schaltgerätekombination
- Schutzart
- Luft- und Kriechstrecken
- Schutz gegen elektrischen Schlag
- Einbau von Schaltgeräten und Bauteilen
- Innere Stromkreise und Verbindungen
- Anschlüsse für von außen eingeführter Leiter

Leistungsanforderungen:

- Isolationseigenschaften
- Erwärmung
- Kurzschlussfestigkeit
- Elektromagnetische Verträglichkeit (EMV)
- Mechanische Funktion

Wir erklären schließlich unter unserer Verantwortung, alle Stücknachweise, die von der Norm vorgesehen sind, mit positivem Ausgang ausgeführt zu haben, und zwar:

Bauanforderungen:

- Schutzgrad der Umhüllung
- Luft- und Kriechstrecken
- Schutz gegen elektrischen Schlag und die Durchgängigkeit von Schutzleiterkreisen, Einbau von Schaltgeräten und Komponenten
- Innere Stromkreise und Verbindungen
- Anschlüsse für von außen eingeführter Leiter
- Mechanische Funktion

Leistungsanforderungen:

- Isolationseigenschaften
- Verdrahtung, Leistungen bei Betriebsbedingungen und Funktionalität

Dichiara inoltre di avere utilizzato componenti certificati CE, di avere rispettato i criteri di scelta e le istruzioni di montaggio indicate sui relativi cataloghi e fogli d'istruzione e di non avere compromesso in alcun modo, durante il montaggio o attraverso modifiche, le prestazioni del materiale utilizzato dichiarate sui già citati cataloghi.

Tali prestazioni e le verifiche effettuate consentono quindi di dichiarare la conformità del quadro in questione alle seguenti richieste della norma:

Richieste di Costruzione:

- Robustezza dei materiali e delle parti del quadro
- Grado di protezione degli involucri
- Distanze d'isolamento in aria e superficiali
- Protezione contro la scossa elettrica ed integrità dei circuiti di protezione
- Installazione degli apparecchi di manovra e dei componenti
- Circuiti elettrici interni e collegamenti
- Terminali per conduttori esterni

Richieste di prestazioni:

- Proprietà dielettriche
- Sovratemperatura
- Capacità di tenuta al cortocircuito
- Compatibilità Elettromagnetica (EMC)
- Funzionamento meccanico

Dichiariamo infine, sotto la nostra responsabilità, di aver effettuato con risultato positivo tutte le prove individuali previste dalla norma e precisamente:

Specifiche di costruzione:

- Grado di protezione degli involucri
- Distanze di isolamento in aria e superficiali
- Protezione contro la scossa elettrica ed integrità dei circuiti di protezione
- Installazione dei componenti
- Circuiti elettrici interni e collegamenti
- Terminali per conduttore esterni
- Funzionamento meccanico

Specifiche di prestazione:

- Proprietà dielettriche
- Cablaggio, prestazione di condizioni operative e funzionalità

Also declares that CE certificated components have been used, and the assembly instructions reported in the relevant catalogues and on the instruction sheets has been followed, and that the performances of the material used declared in the above-mentioned catalogues have in no way been jeopardized during assembling or by any modification.

These performances and the verifications carried out therefore allow us to declare conformity of the switchgear assembly under consideration of the following requirements of the Standard.

Constructional requirements:

- Strength of materials and parts of the assembly
- Degree of protection
- Clearances and creepage distances
- Protection against electric shock
- Incorporation of switching devices and components
- Internal electrical circuits and connections
- Terminals for external conductions

Performance requirements:

- Dielectric properties
- Temperature-rise limits
- Short-circuit withstand strength
- Electromagnetic compatibility (EMC)
- Mechanical operation

Finally, declares, under its own responsibility that all the routine verifications prescribed by the Standard have been carried out successfully and precisely:

Design specifications:

- Degree of protection of the enclosure
- Clearances and creepage distances
- Protection against electric shock an integrity of protective circuits
- Incorporation of switching devices components
- Internal electrical circuits and connections
- Terminals for external conductors
- Mechanical operation

Performance specifications:

- Dielectric properties
- Wiring, operational performance and function

Datum:
Data: 05.06.2023
Date:

Unterschrift:
Firma:
Signature:

Managing Director
Philipp Schwan

tomas.daukas@elintacharge.com
22.08.2023 06:06:06



Niederspannungs-
Schaltgerätekombinationen nach IEC
EN 61439-7

CE KONFORMITÄTSERKLÄRUNG
DICHIARAZIONE DI CONFORMITÀ CE
CE DECLARATION OF CONFORMITY

Quadri elettrici per bassa tensione
secondo IEC EN 61439-7




Low voltage switchgears and
controlgear assemblies in compliance
with the Standard IEC EN 61439-7

Diese CE-Erklärung wurde mit Unterstützung des TÜV SÜD Product Service GmbH Zertifizierstellen (**Notified Body 0123**) erstellt.
La presente dichiarazione CE è stata redatta con il support del TÜV SÜD Product Service GmbH Zertifizierstellen (**Notified Body 0123**).
This CE declaration was drawn up with the support of TÜV SÜD Product Service GmbH Zertifizierstellen (**Notified Body 0123**).

Datum:
Data: 05.06.2023
Date:

Unterschrift:
Firma:
Signature:

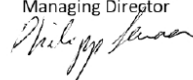Managing Director


tomas.daukas@elintacharge.com
22.08.2023 06:06:06